


Assembly  
and  
Operation  
of the



## SCANALYZER

MODEL SB-620

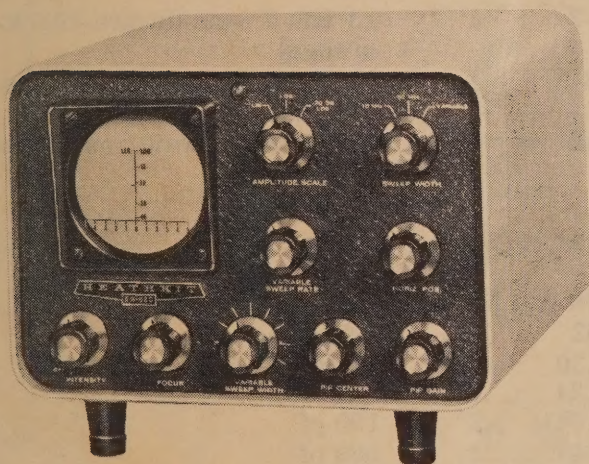

## CONDENSED MANUAL

HEATH COMPANY

BENTON HARBOR, MICHIGAN 49022

595-827-05



# PARTS LIST

The numbers in parentheses are keyed to the numbers on the Parts Pictorials (fold-out from Pages 3 through 5) to aid in parts identification.

To order replacement parts, refer to the Replacement Parts Price List and use the Parts Order Form furnished with this kit. If a Parts Order Form is not available, refer to "Replacement Parts" inside the rear cover of the Manual.

PART No.	PARTS Per Kit	DESCRIPTION
----------	---------------	-------------

PART No.	PARTS Per Kit	DESCRIPTION
----------	---------------	-------------

## RESISTORS

## Resistors-1/2 Watt (cont'd.)

### 1/2 Watt

(1)1-62	2	51 $\Omega$ (green-brown-black)
1-84	3	62 $\Omega$ (blue-red-black)
1-3	2	100 $\Omega$ (brown-black-brown)
1-6	1	470 $\Omega$ (yellow-violet-brown)
1-63	2	510 $\Omega$ (green-brown-brown)
1-9	3	1000 $\Omega$ (brown-black-red)
1-93	1	1800 $\Omega$ (brown-gray-red)
1-13	1	2700 $\Omega$ (red-violet-red)
1-14	2	3300 $\Omega$ (orange-orange-red)
1-16	1	4700 $\Omega$ (yellow-violet-red)
1-20	6	10 K $\Omega$ (brown-black-orange)
1-21	2	15 K $\Omega$ (brown-green-orange)
1-22	2	22 K $\Omega$ (red-red-orange)
1-24	1	33 K $\Omega$ (orange-orange-orange)
1-25	5	47 K $\Omega$ (yellow-violet-orange)
1-60	1	68 K $\Omega$ (blue-gray-orange)
1-26	4	100 K $\Omega$ (brown-black-yellow)
1-27	1	150 K $\Omega$ (brown-green-yellow)
1-29	5	220 K $\Omega$ (red-red-yellow)
1-31	2	330 K $\Omega$ (orange-orange-yellow)
1-33	2	470 K $\Omega$ (yellow-violet-yellow)
1-68	1	820 K $\Omega$ (gray-red-yellow)
1-36	2	1.5 megohm (brown-green-green)
1-38	3	3.3 megohm (orange-orange-green)
1-71	1	4.7 megohm (yellow-violet-green)
1-86	3	5.6 megohm (green-blue-green)
1-40	3	10 megohm (brown-black-blue)

1-74	1	18 megohm (brown-gray-blue)
1-70	2	22 megohm (red-red-blue)
1-139	1	100 megohm (brown-black-violet)
<b>Other</b>		
(2)1-2-1	1	1000 $\Omega$ 1 watt (brown-black-red)
1-27-1	1	33 K $\Omega$ 1 watt (orange-orange-orange)
(3)1-15-2	1	1000 $\Omega$ 2 watt (brown-black-red)
1-3-2	1	10 K $\Omega$ 2 watt (brown-black-orange)
1-18-2	1	33 K $\Omega$ 2 watt (orange-orange-orange)
1-5-2	1	220 K $\Omega$ 2 watt (red-red-yellow)


## CAPACITORS

### Resin and Mica

(4)20-52	1	7.5 pf
20-130	1	12 pf
20-124	1	115 pf
20-104	2	130 pf
20-107	1	680 pf
20-137	1	1800 pf
(5)20-42	1	510 pf mica

### Disc

(6)21-78	2	5 pf
21-121	1	56 pf
21-54	1	75 pf
21-9	2	100 pf
21-56	6	470 pf
21-27	1	.005 $\mu$ d
21-31	19	.02 $\mu$ d

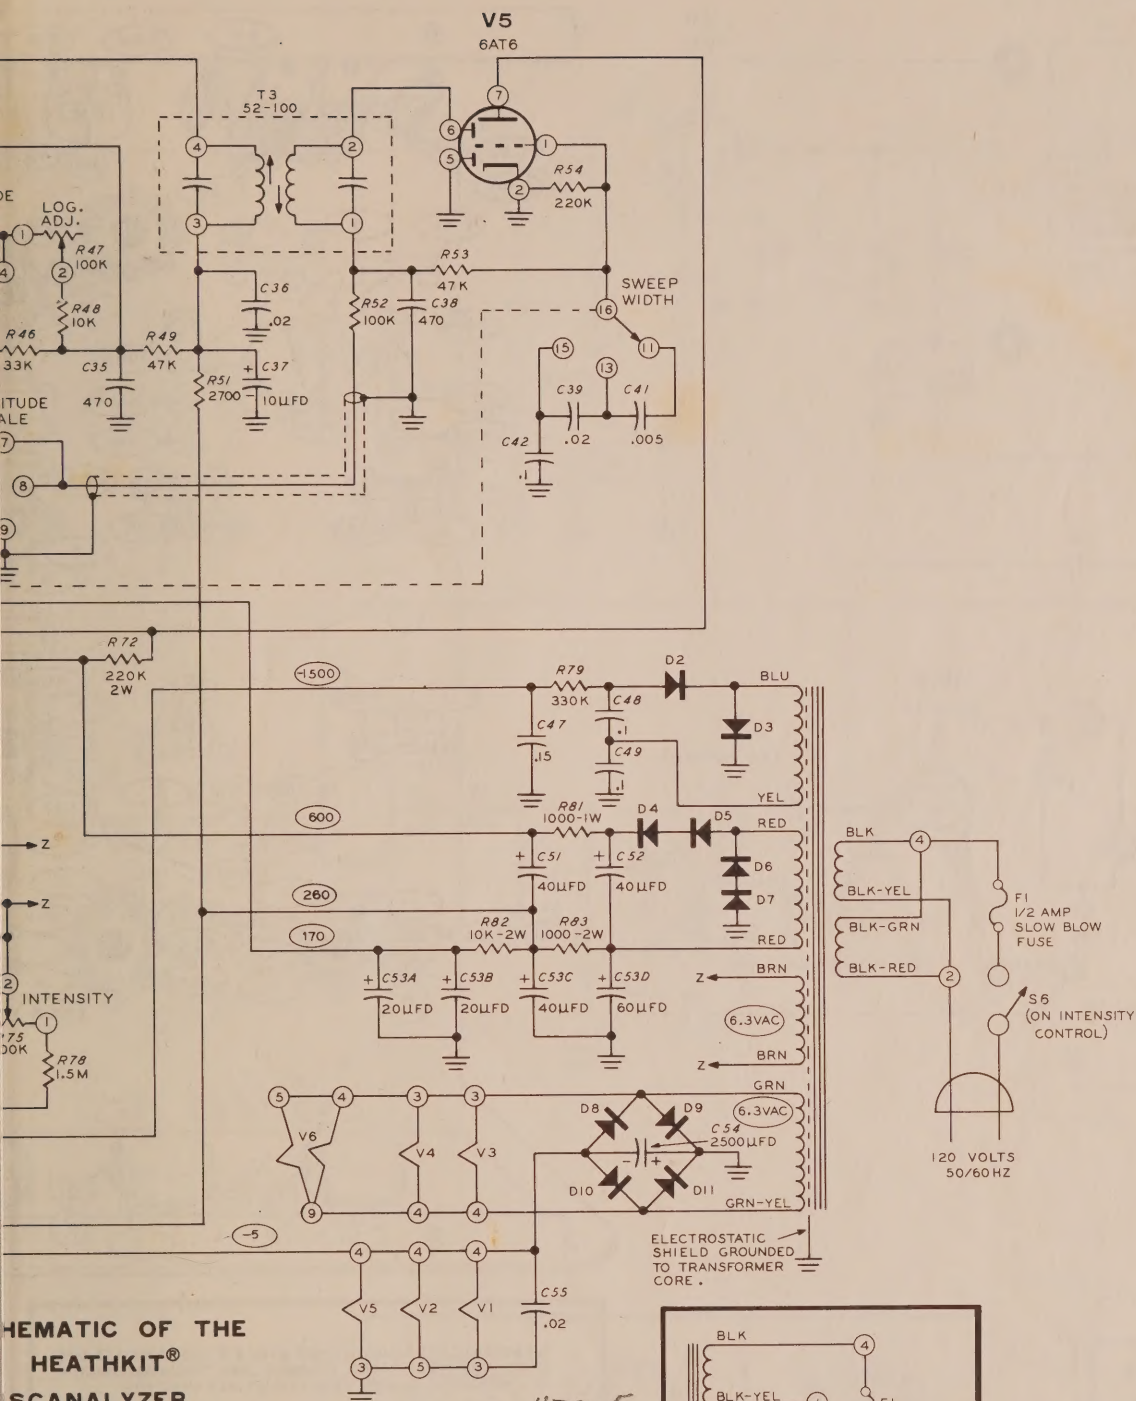

# **SCHEMATIC OF THE** **HEATHKIT®** **SCANALYZER** **MODEL SB-620**

SEE PAGE 75.

INDUCTOR USED ACROSS L3 WHEN WIRED FOR 1000 kHz.

RESISTOR FOR A RECEIVER IF FREQUENCY OF 455 kHz, C4 IS 75 pf.


INDUCTOR COIL 40-775 IS USED AT L3, CHANGE C3 TO 260 pf.

VALUES LESS THAN 1 ARE IN μfd. VALUES OF 1 AND ABOVE ARE IN pf UNLESS OTHERWISE MARKED.

RESISTORS ARE 1/2 WATT UNLESS OTHERWISE MARKED. RESISTOR VALUES ARE IN OHMS, K = 1,000, M = 1,000,000.

ROTARY SWITCHES ARE SHOWN IN FULL COUNTERCLOCKWISE ROTATION AS VIEWED FROM THE FRONT. ARROWS SHOW DIRECTION OF COUNTERCLOCKWISE KNOB ROTATION.

POWER SUPPLY REGULATOR, IS ALSO USED AS THE PANEL "ON" INDICATOR.

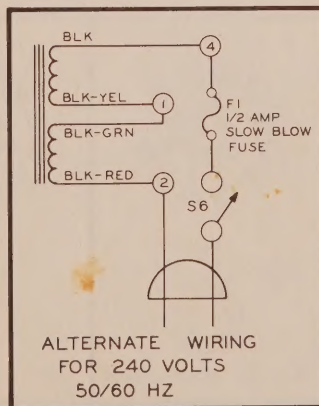

*Handwritten notes:*  
R1 22m 470pf  
6mh - R2 3.3m C4 56pf  
L3- 40-807



## PARTS LIST

The numbers in parentheses are keyed to the numbers on the Parts Pictorials (fold-out from Pages 3 through 5) to aid in parts identification.

To order replacement parts, refer to the Replacement Parts Price List and use the Parts Order Form furnished with this kit. If a Parts Order Form is not available, refer to "Replacement Parts" inside the rear cover of the Manual.

PART No.	PARTS Per Kit	DESCRIPTION
----------	---------------	-------------

### RESISTORS

#### 1/2 Watt

(1) 1-62	2	51 $\Omega$ (green-brown-black)
1-84	3	62 $\Omega$ (blue-red-black)
1-3	2	100 $\Omega$ (brown-black-brown)
1-6	1	470 $\Omega$ (yellow-violet-brown)
1-63	2	510 $\Omega$ (green-brown-brown)
1-9	3	1000 $\Omega$ (brown-black-red)
1-93	1	1800 $\Omega$ (brown-gray-red)
1-13	1	2700 $\Omega$ (red-violet-red)
1-14	2	3300 $\Omega$ (orange-orange-red)
1-16	1	4700 $\Omega$ (yellow-violet-red)
1-20	6	10 K $\Omega$ (brown-black-orange)
1-21	2	15 K $\Omega$ (brown-green-orange)
1-22	2	22 K $\Omega$ (red-red-orange)
1-24	1	33 K $\Omega$ (orange-orange-orange)
1-25	5	47 K $\Omega$ (yellow-violet-orange)
1-60	1	68 K $\Omega$ (blue-gray-orange)
1-26	4	100 K $\Omega$ (brown-black-yellow)
1-27	1	150 K $\Omega$ (brown-green-yellow)
1-29	5	220 K $\Omega$ (red-red-yellow)
1-31	2	330 K $\Omega$ (orange-orange-yellow)
1-33	2	470 K $\Omega$ (yellow-violet-yellow)
1-68	1	820 K $\Omega$ (gray-red-yellow)
1-36	2	1.5 megohm (brown-green-green)
1-38	3	3.3 megohm (orange-orange-green)
1-71	1	4.7 megohm (yellow-violet-green)
1-86	3	5.6 megohm (green-blue-green)
1-40	3	10 megohm (brown-black-blue)

PART No.	PARTS Per Kit	DESCRIPTION
----------	---------------	-------------

### Resistors-1/2 Watt (cont'd.)

1-74	1	18 megohm (brown-gray-blue)
1-70	2	22 megohm (red-red-blue)
1-139	1	100 megohm (brown-black-violet)
<b>Other</b>		
(2) 1-2-1	1	1000 $\Omega$ 1 watt (brown-black-red)
1-27-1	1	33 K $\Omega$ 1 watt (orange-orange-orange)
(3) 1-15-2	1	1000 $\Omega$ 2 watt (brown-black-red)
1-3-2	1	10 K $\Omega$ 2 watt (brown-black-orange)
1-18-2	1	33 K $\Omega$ 2 watt (orange-orange-orange)
1-5-2	1	220 K $\Omega$ 2 watt (red-red-yellow)

### CAPACITORS


#### Resin and Mica

(4) 20-52	1	7.5 pf
20-130	1	12 pf
20-124	1	115 pf
20-104	2	130 pf
20-107	1	680 pf
20-137	1	1800 pf
(5) 20-42	1	510 pf mica





#### Disc

(6) 21-78	2	5 pf
21-121	1	56 pf
21-54	1	75 pf
21-9	2	100 pf
21-56	6	470 pf
21-27	1	.005 $\mu$ fd
21-31	19	.02 $\mu$ fd

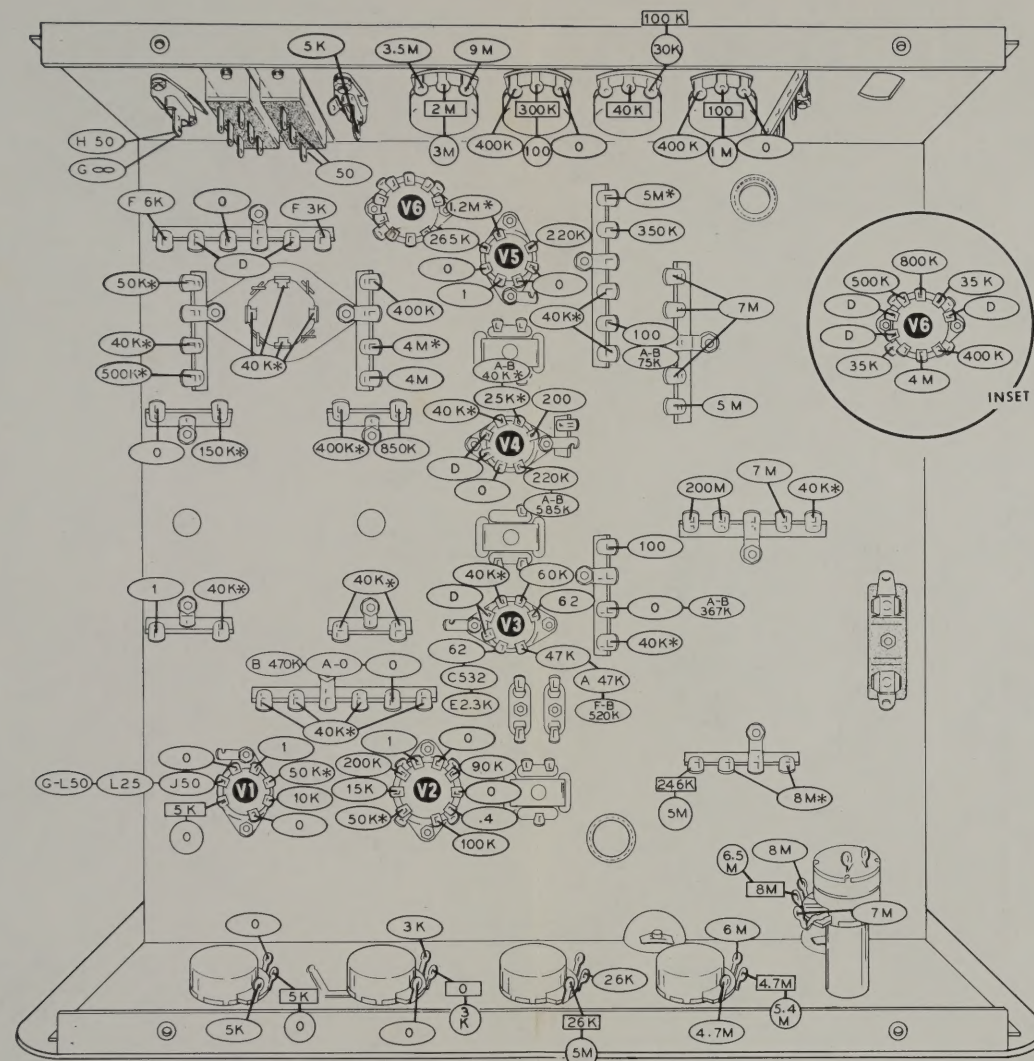



- NOTES:


1. MEASUREMENTS MADE IN OHMS WITH A VTVM HAVING 11 MEG-OHMS INPUT RESISTANCE, COMMON LEAD TO CHASSIS GROUND. (K = 1000, M = 1,000,000). RESISTANCES MAY VARY 20%.
  2. CONTROLS POSITIONED AS FOLLOWS VIEWED FROM KNOB END OF SHAFT.  

    -  = FULLY COUNTERCLOCKWISE
    -  = FULLY CLOCKWISE
  3.  = RESISTANCE READING AT POINT INDICATED.
- \* BEFORE READING THE METER IN A CIRCUIT INVOLVING LARGE FILTER CAPACITORS, WAIT A FEW MOMENTS UNTIL THE OHM-METER NEEDLE HAS ALMOST STOPPED MOVING.

CONDITIONS:





AMPLITUDE SCALE SWITCH NORMALLY IN THE "LIN" POSITION  
UNLESS THE LEGEND BELOW INDICATES OTHERWISE.

SWEEP WIDTH SWITCH NORMALLY IN THE "VARIABLE" POSITION  
UNLESS THE LEGEND BELOW INDICATES OTHERWISE.

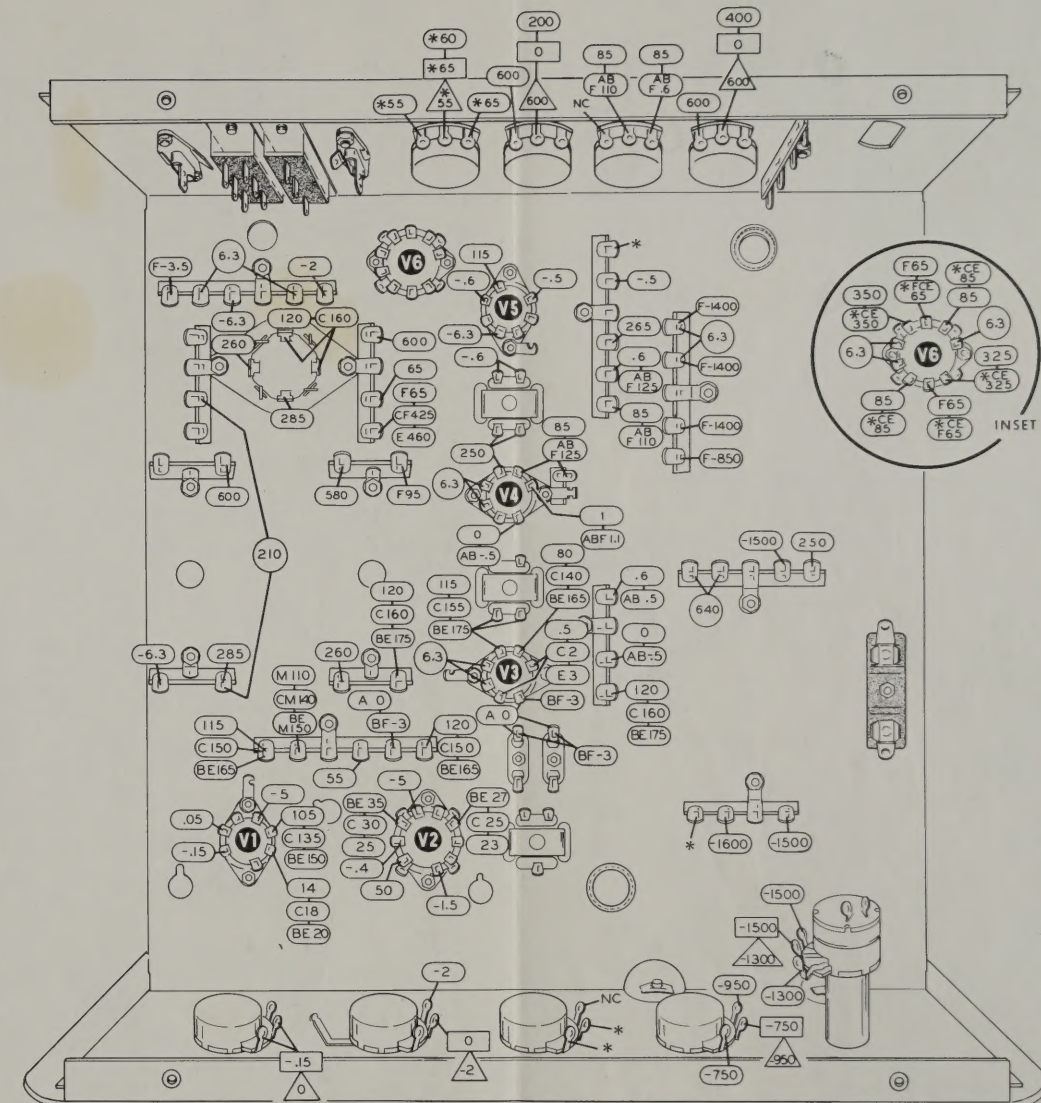- A. AMPLITUDE SCALE SWITCH IN "LOG" POSITION.
- B. AMPLITUDE SCALE SWITCH IN "-20 DB LOG" POSITION.
- C. SWEEP WIDTH SWITCH IN "50 kHz" POSITION.
- D. BECAUSE OF THE SOLID STATE DIODES USED IN THESE CIRCUITS, READINGS WILL VARY DEPENDING ON OHMMETER RANGE SELECTED AND TYPE OF OHMMETER USED.
- E. SWEEP WIDTH SWITCH IN "10 kHz" POSITION.
- F. INDICATES THERE IS A CONTROL IN THE CIRCUIT, AND THAT READINGS MAY VARY DEPENDING ON THE CONTROL SETTING.
- G. 20 DB ATTEN SWITCH AT THE "OUT" POSITION.
- H. 20 DB ATTEN SWITCH AT THE "IN" POSITION.
- I. HAM-SCAN SPECTRUM ANALYZER SWITCH AT THE "HAM SCAN" POSITION.
- J. HAM-SCAN SPECTRUM ANALYZER SWITCH AT THE "SPECTRUM ANALYZER" POSITION.



NOTES:

1. MEASUREMENTS MADE WITH A VTVM HAVING 11 MEGOHMS INPUT RESISTANCE, WITH COMMON LEAD TO CHASSIS AND POLARITY REVERSING SWITCH.
  2. CAUTION: HIGH NEGATIVE VOLTAGES ARE FOUND AT MANY POINTS - TAKE PROPER PRECAUTIONS IN HANDLING THE CHASSIS AND IN CONNECTING YOUR VOLTMETER.
  3. VOLTAGE LEGEND:  
CONTROLS VIEWED FROM KNOB END OF SHAFT:  
 = DCV, FULLY COUNTERCLOCKWISE.  
 = DCV, FULLY CLOCKWISE.  
 = NORMAL OPERATING DCV.  
 = AC VOLTS MEASURED BETWEEN POINTS INDICATED
- \* BECAUSE OF THE SAWTOOTH WAVEFORM AT THESE POINTS, THE DC VOLTAGE WILL FLUCTUATE.

CONDITIONS:

ALL LUGS NOT MARKED ARE UNDERSTOOD TO HAVE 0 VOLTS.

AMPLITUDE SCALE SWITCH NORMALLY IN THE "LIN" POSITION  
UNLESS THE LEGEND BELOW INDICATES OTHERWISE.


SWEEP WIDTH SWITCH NORMALLY IN THE "VARIABLE" POSITION  
UNLESS THE LEGEND BELOW INDICATES OTHERWISE.

- A. AMPLITUDE SCALE SWITCH IN "LOG" POSITION.
- B. AMPLITUDE SCALE SWITCH IN "-20 DB LOG" POSITION.
- C. SWEEP WIDTH SWITCH IN "50 kHz" POSITION.
- D. SWEEP WIDTH SWITCH IN "10 kHz" POSITION.
- E. INDICATES THERE IS A CONTROL IN THE CIRCUIT, AND THAT READINGS MAY VARY DEPENDING ON THE CONTROL SETTING.
- F. THIS VOLTAGE WILL BE "0" FOR ALL IF FREQUENCIES EXCEPT 455 kHz AND 3345 kHz.



FIGURE 43

FIGURE 44



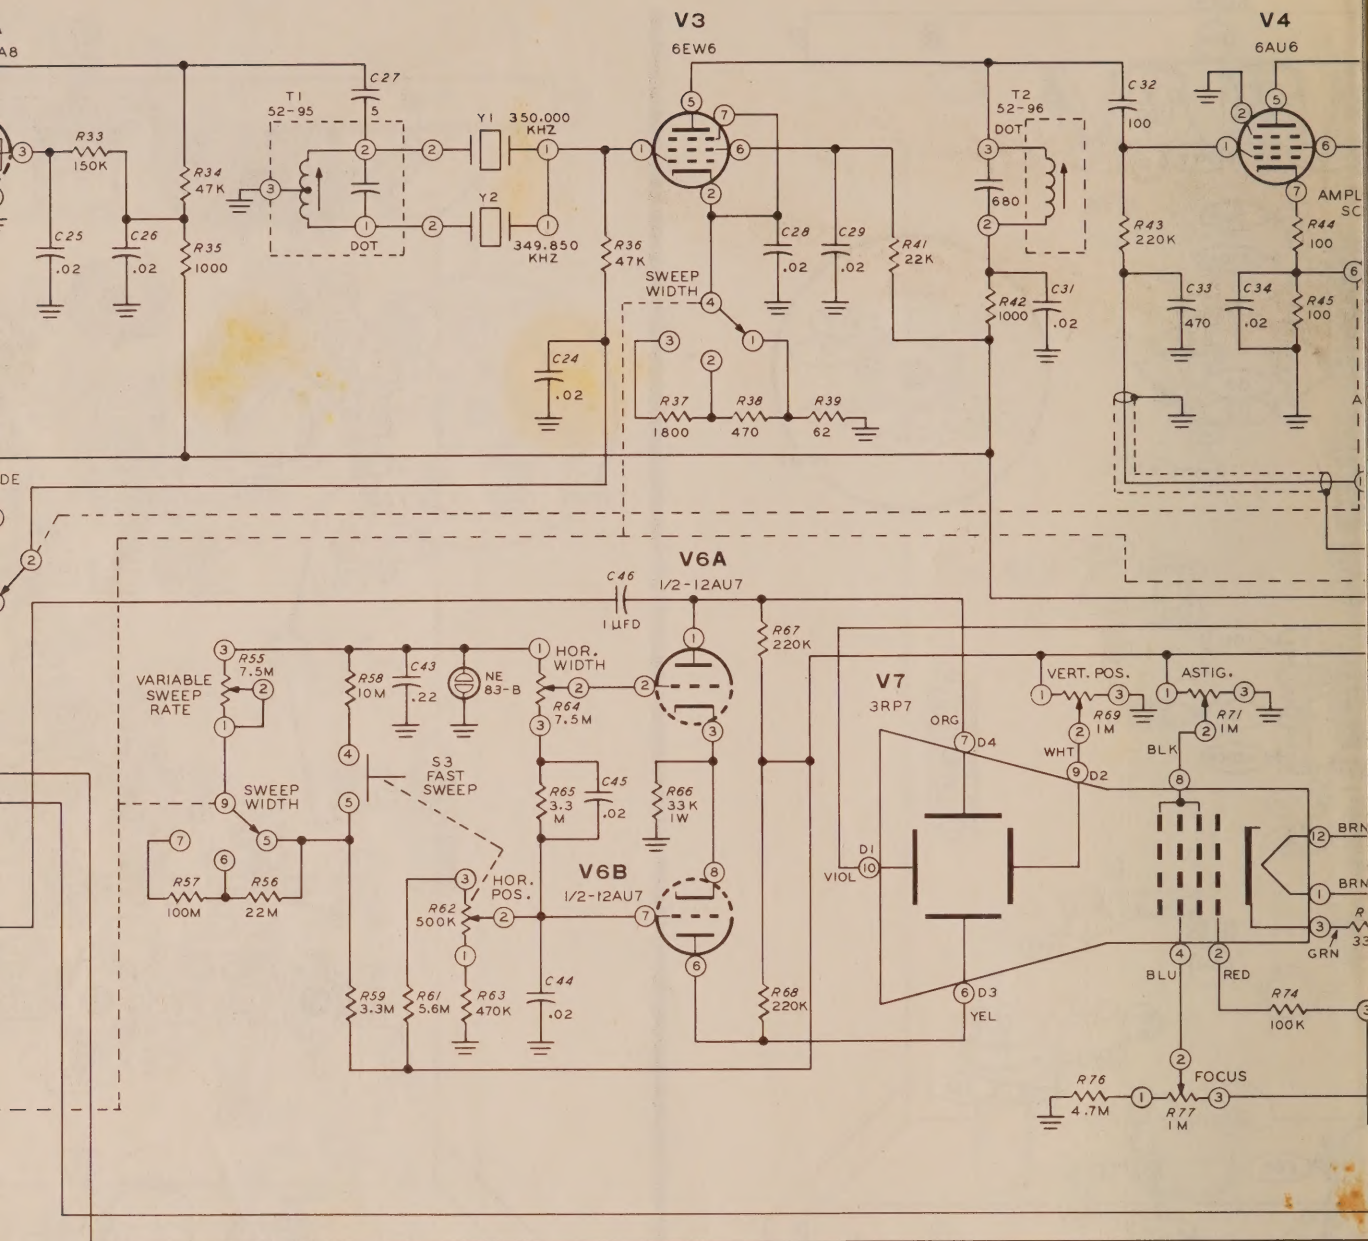

# OPTIONAL MIXER INPUT CIRCUITS

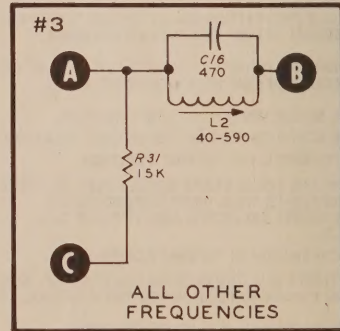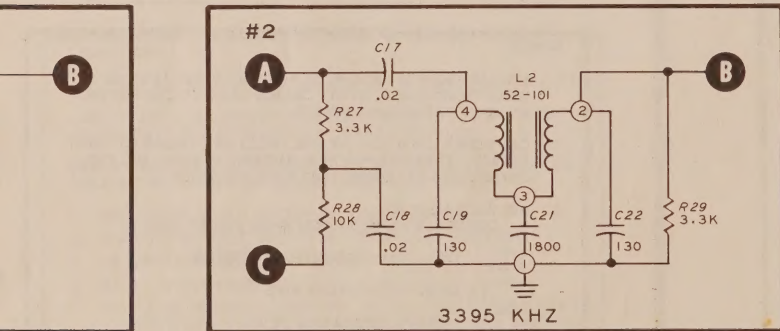

## NOTES:

1. SEE IF C
2. A. NO C
3. WHEN OS
4. CAPACIT
5. ALL RES
6. SWITCH
7. NE-83-A



PART No.	PARTS Per Kit	DESCRIPTION
-------------	------------------	-------------

**Tubular-Resin**

(7) 23-29	2	.1 $\mu$ fd tubular, 1200 VDC
23-94	1	.15 $\mu$ fd tubular, 1600 VDC
(8) 27-47	1	.1 $\mu$ fd resin
(9) 27-60	1	.22 $\mu$ fd resin
27-71	1	1 $\mu$ fd resin

**Electrolytic**

(10) 25-94	1	10 $\mu$ fd
25-41	2	40 $\mu$ fd
(11) 25-56	1	100 $\mu$ fd
25-154	1	2500 $\mu$ fd
(12) 25-93	1	60-40-20-20 $\mu$ fd

**CONTROLS**

(13) 10-42	2	5000 $\Omega$
10-32	1	1 megohm
10-94	2	7.5 megohm
(14) 10-58	1	100 K $\Omega$ twist-tab
10-127	2	1 megohm twist-tab
10-115	1	7.5 megohm twist-tab
(15) 10-166	1	100 K $\Omega$ with wire leads
(16) 19-78	1	500 K $\Omega$ with snap switch
(17) 19-80	1	500 K $\Omega$ with push switch

**SWITCHES**

(18) 60-4	1	SPDT slide switch
(19) 60-15	1	DPDT slide switch
(20) 63-336	1	3-position, 3-pole single-wafer switch
(21) 63-439	1	3-position, 4-pole, single-wafer switch

**COILS-TRANSFORMERS**

(22) 40-590	2	350 kHz trap coil
40-775	1	Oscillator coil
40-776	1	Oscillator coil
40-808	1	Oscillator coil
40-807	1	Oscillator coil
(23) 45-33	1	305 $\mu$ H peaking coil
(24) 52-95	1	IF input transformer
52-96	1	IF coupling transformer
52-100	1	IF output transformer
(25) 52-101	1	Bandpass coupling transformer
(26) 54-182	1	Power transformer

PART No.	PARTS Per Kit	DESCRIPTION
-------------	------------------	-------------

**TERMINAL STRIPS**

(27) 431-57	1	2-lug
(28) 431-32	4	2-lug
(29) 431-10	2	3-lug
(30) 431-12	3	4-lug
(31) 431-40	1	4-lug
(32) 431-45	1	6-lug
(33) 431-55	2	6-lug
(34) 431-44	1	4-lug high voltage type
(35) 431-42	2	5-lug high voltage type

**SOCKETS**

(36) 434-34	4	7-pin tube socket
(37) 434-56	2	9-pin tube socket
(38) 434-42	2	Phono socket
(39) 434-74	2	Crystal socket
(40) 434-159	1	CRT socket

**HARDWARE****#8 Hardware**

(41) 250-137	4	8-32 x 3/8" screw
(42) 250-43	9	8-32 x 1/4" setscrew
(43) 252-4	4	8-32 nut
(44) 254-2	8	#8 lockwasher

**#6 Hardware**

(45) 250-40	2	6-32 x 1-1/2" screw
(46) 250-29	4	6-32 x 3/4" screw
(47) 250-250	4	6-32 x 1/2" screw (black)
(48) 250-89	7	6-32 x 3/8" screw
(49) 250-56	16	6-32 x 1/4" screw
(50) 252-3	19	6-32 nut
(51) 253-60	4	#6 flat washer
(52) 254-1	36	#6 lockwasher
(53) 259-1	1	Large #6 solder lug
(54) 259-6	3	Small #6 solder lug

**#3 Hardware**

(55) 250-172	2	3-48 x 3/8" screw
(56) 250-49	12	3-48 x 1/4" screw
(57) 252-1	14	3-48 nut
(58) 254-7	18	#3 lockwasher







PART No.	PARTS Per Kit	DESCRIPTION
----------	---------------	-------------

**Tubular-Resin**

(7) 23-29	2	.1 $\mu$ fd tubular, 1200 VDC
23-94	1	.15 $\mu$ fd tubular, 1600 VDC
(8) 27-47	1	.1 $\mu$ fd resin
(9) 27-60	1	.22 $\mu$ fd resin
27-71	1	1 $\mu$ fd resin

**Electrolytic**

(10) 25-94	1	10 $\mu$ fd
25-41	2	40 $\mu$ fd
(11) 25-56	1	100 $\mu$ fd
25-154	1	2500 $\mu$ fd
(12) 25-93	1	60-40-20-20 $\mu$ fd

**CONTROLS**

(13) 10-42	2	5000 $\Omega$
10-32	1	1 megohm
10-94	2	7.5 megohm
(14) 10-58	1	100 K $\Omega$ twist-tab
10-127	2	1 megohm twist-tab
10-115	1	7.5 megohm twist-tab
(15) 10-166	1	100 K $\Omega$ with wire leads
(16) 19-78	1	500 K $\Omega$ with snap switch
(17) 19-80	1	500 K $\Omega$ with push switch

**SWITCHES**

(18) 60-4	1	SPDT slide switch
(19) 60-15	1	DPDT slide switch
(20) 63-336	1	3-position, 3-pole single-wafer switch
(21) 63-439	1	3-position, 4-pole, single-wafer switch

**COILS-TRANSFORMERS**

(22) 40-590	2	350 kHz trap coil
40-775	1	Oscillator coil
40-776	1	Oscillator coil
40-808	1	Oscillator coil
40-807	1	Oscillator coil
(23) 45-33	1	305 $\mu$ H peaking coil
(24) 52-95	1	IF input transformer
52-96	1	IF coupling transformer
52-100	1	IF output transformer
(25) 52-101	1	Bandpass coupling transformer
(26) 54-182	1	Power transformer

PART No.	PARTS Per Kit	DESCRIPTION
----------	---------------	-------------

**TERMINAL STRIPS**

(27) 431-57	1	2-lug
(28) 431-32	4	2-lug
(29) 431-10	2	3-lug
(30) 431-12	3	4-lug
(31) 431-40	1	4-lug
(32) 431-45	1	6-lug
(33) 431-55	2	6-lug
(34) 431-44	1	4-lug high voltage type
(35) 431-42	2	5-lug high voltage type

**SOCKETS**

(36) 434-34	4	7-pin tube socket
(37) 434-56	2	9-pin tube socket
(38) 434-42	2	Phono socket
(39) 434-74	2	Crystal socket
(40) 434-159	1	CRT socket

**HARDWARE****#8 Hardware**

(41) 250-137	4	8-32 x 3/8" screw
(42) 250-43	9	8-32 x 1/4" setscrew
(43) 252-4	4	8-32 nut
(44) 254-2	8	#8 lockwasher

**#6 Hardware**

(45) 250-40	2	6-32 x 1-1/2" screw
(46) 250-29	4	6-32 x 3/4" screw
(47) 250-250	4	6-32 x 1/2" screw (black)
(48) 250-89	7	6-32 x 3/8" screw
(49) 250-56	16	6-32 x 1/4" screw
(50) 252-3	19	6-32 nut
(51) 253-60	4	#6 flat washer
(52) 254-1	36	#6 lockwasher
(53) 259-1	1	Large #6 solder lug
(54) 259-6	3	Small #6 solder lug

**#3 Hardware**

(55) 250-172	2	3-48 x 3/8" screw
(56) 250-49	12	3-48 x 1/4" screw
(57) 252-1	14	3-48 nut
(58) 254-7	18	#3 lockwasher



PART No.	PARTS Per Kit	DESCRIPTION
-------------	------------------	-------------

### Control Hardware

(59)252-7	9	Control nut
(60)253-10	9	Control flat washer
(61)254-4	2	Thick control lockwasher
(62)254-5	6	Thin control lockwasher
(63)259-10	2	Control solder lug
(64)455-9	1	Brass bushing

### Other Hardware

(65)252-9	1	Speednut, large
252-10	2	Speednut, small
(66)255-55	1	3/4" long, tapped phenolic spacer
(67)255-63	2	2" tapped spacer
(68)260-7	3	Transformer mounting clip
(69)260-29	2	Crystal clip

### METAL PARTS

(70)100-329	1	CRT mounting ring
(71)207-1	2	CRT neck clamp
(72)210-31	1	Bezel
(73)203-448-3	1	Front Panel
(74)200-471-2	1	Chassis
(75)90-337	1	Cabinet

### DIODES-CRYSTALS-TUBES-LAMP

(76)56-49	1	Varicap*
(77)57-27	8	Silicon diode, 750 ma., 500 PIV
(78)57-44	2	Selenium diode, 2 ma., 1750 PIV
(79)404-304	1	Crystals (matched set, 350 kHz and 349,850 kHz)
411-10	1	6AT6 tube
411-11	1	6AU6 tube
411-25	1	12AU7 tube

PART No.	PARTS Per Kit	DESCRIPTION
-------------	------------------	-------------

### Diodes-Crystals-Tubes-Lamp (cont'd.)


411-124	1	6EA8 tube
411-170	2	6EW6 tube
411-232	1	3RP7 CR tube
(80)412-56	2	NE-83 neon lamp

### MISCELLANEOUS

(81)73-44	2	3/4" plastic grommet
73-46	1	5/16" plastic grommet
(82)73-5	1	Rubber cushion strip
(83)75-24	1	Line cord strain relief
89-1	1	Line cord
(84)134-139	1	Wire harness
(85)205-254	1	Alignment tool blade
(86)206-30	1	Spiral shield
(87)206-304	1	CRT shield
(88)261-9	4	Rubber foot
(89)261-25	2	Plastic foot
(90)255-59	2	Plastic foot spacer
343-5	1	Coaxial cable
344-50	1	Hookup wire
346-1	1	Sleeving
391-47	1	Nameplate
(91)413-10	1	Pilot lamp lens
421-20	1	1/2 ampere slow-blow fuse
(92)422-1	1	Fuse block
(93)438-4	2	Phono plug
(94)462-191	9	Knob
(95)481-1	1	Capacitor mounting wafer
(96)414-17-1	1	Grid screen
490-1	1	Alignment tool
490-5	1	Nut starter
391-34	1	Identification label
597-260	1	Parts order form
597-308	1	Kit Builders Guide
	1	Manual (See front cover for part number.)
		Solder

\*Registered trademark of TRW Semiconductors, Inc.

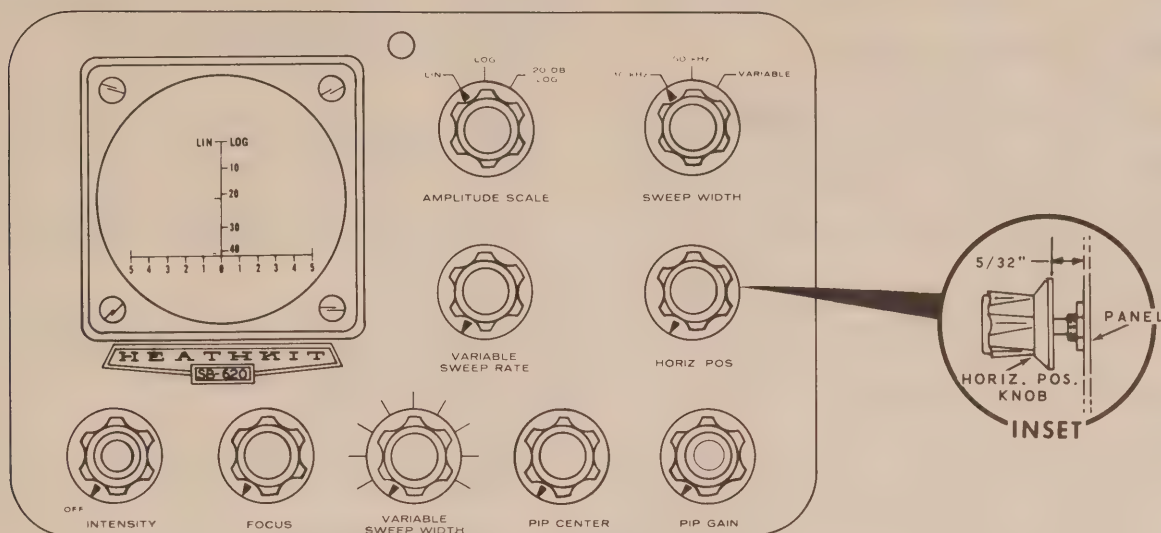


**PICTORIAL 14**

## KNOB INSTALLATION

Refer to Pictorial 14 for the following steps.

- ( ) Turn all the control shafts fully counterclockwise.
- ( ) Refer to Detail 14A and start an 8-32 x 1/4" setscrew in each of the nine knobs. Do not let the setscrew project into the shaft hole of the knob.

**Detail 14A**


- ( ) Place a knob on each of the control shafts so its pointer is positioned as shown. Tighten the setscrews.

**NOTE:** When mounting the HORIZ POS knob, leave a clearance of 5/32" between the panel and the skirt of the knob.

- ( ) Carefully peel away the backing paper from the blue and white identification label. Then press the label onto the chassis. Be sure to refer to the numbers on this label in any communications you have with the Heath Company about this kit.

## TEST AND ADJUSTMENT

### PRESET THE CONTROLS

Before applying power to the unit or making any tests, preset the controls as follows:

#### Front Panel Controls

- ( ) INTENSITY - OFF (fully counterclockwise until a snap is heard).
- ( ) FOCUS - Center of rotation.
- ( ) VARIABLE SWEEP WIDTH - Fully clockwise.
- ( ) PIP CENTER - Center of rotation.
- ( ) PIP GAIN - Fully counterclockwise.
- ( ) VARIABLE SWEEP RATE - Fully clockwise.
- ( ) HORIZ POS - Center of rotation.
- ( ) AMPLITUDE SCALE - LIN position.
- ( ) SWEEP WIDTH - VARIABLE position.



**Rear Apron Controls (as viewed from the rear)**

- ( ) ASTIG - Center of rotation.
- ( ) LOG ADJ - Fully counterclockwise.
- ( ) VERT POS - Center of rotation.
- ( ) HORIZ WIDTH - Center of rotation.
- ( ) HAM SCAN-SPECTRUM ANALYZER -  
HAM SCAN position.
- ( ) 20 dB ATTEN - IN position.
- ( ) -20 dB LOG ADJ - Center of rotation.  
(This control is located just above the two slide switches on the rear apron. The rotor of the control can be adjusted with the alignment tool furnished with this kit.)

**RESISTANCE MEASUREMENTS**

Resistance measurements were made with a vacuum tube voltmeter with one lead connected to the chassis. The resistance readings may differ as a volt-ohm-milliammeter is used.

Figure 1 enables you to identify the test points and shows the resistance to be expected at each. Due to component and meter tolerances, readings can vary up to 20%.

- ( ) Turn the Scanalyzer bottom side up on a soft cloth. Prop up the rear of the chassis so there is no weight on the CRT socket.

Measure resistances at the following test points. Give the capacitors time to charge:

- ( ) Terminal strip C, lug 1.
- ( ) Terminal strip M, lug 2.
- ( ) Terminal strip N, lug 2.
- ( ) Capacitor S, lug 1.
- ( ) Terminal strip R, lug 4.

NOTE: If proper resistance readings are not obtained, recheck your work and correct the condition before proceeding.

**TUBE AND CRYSTAL INSTALLATION**

- ( ) Install the tubes in their sockets according to the type numbers screened on the chassis.
- ( ) Refer to Figure 4 (fold-out from Page 53) and install crystals at Y1 (350,000 kHz) and Y2 (349,850 kHz).
- ( ) Install a 1/2 ampere slow-blow fuse in its holder as shown in Figure 1.

**INITIAL OPERATIONAL CHECK**

**CAUTION: THE VOLTAGES IN THIS UNIT ARE DANGEROUS.** Extreme care should be taken whenever this kit is operated or handled when not installed in its cabinet. Extremely high voltages appear at the CRT socket, the INTENSITY control terminals, and the lugs of terminal strips C, D, and E. These voltages can be **LETHAL**. **IMPORTANT:** Any time the chassis must be handled, the unit should be unplugged, and a screwdriver with an insulated handle should be used to short circuit to chassis the leads of the positive (+) and marked ends of all electrolytic and tubular capacitors.

NOTE: If at any time during the following tests the unit does not perform properly, unplug the line cord immediately and refer to the In Case of Difficulty section.

- ( ) Plug the line cord into a 120 or 240 volt (depending on how you wired the power transformer on Page 15) 50/60 Hz, AC outlet.



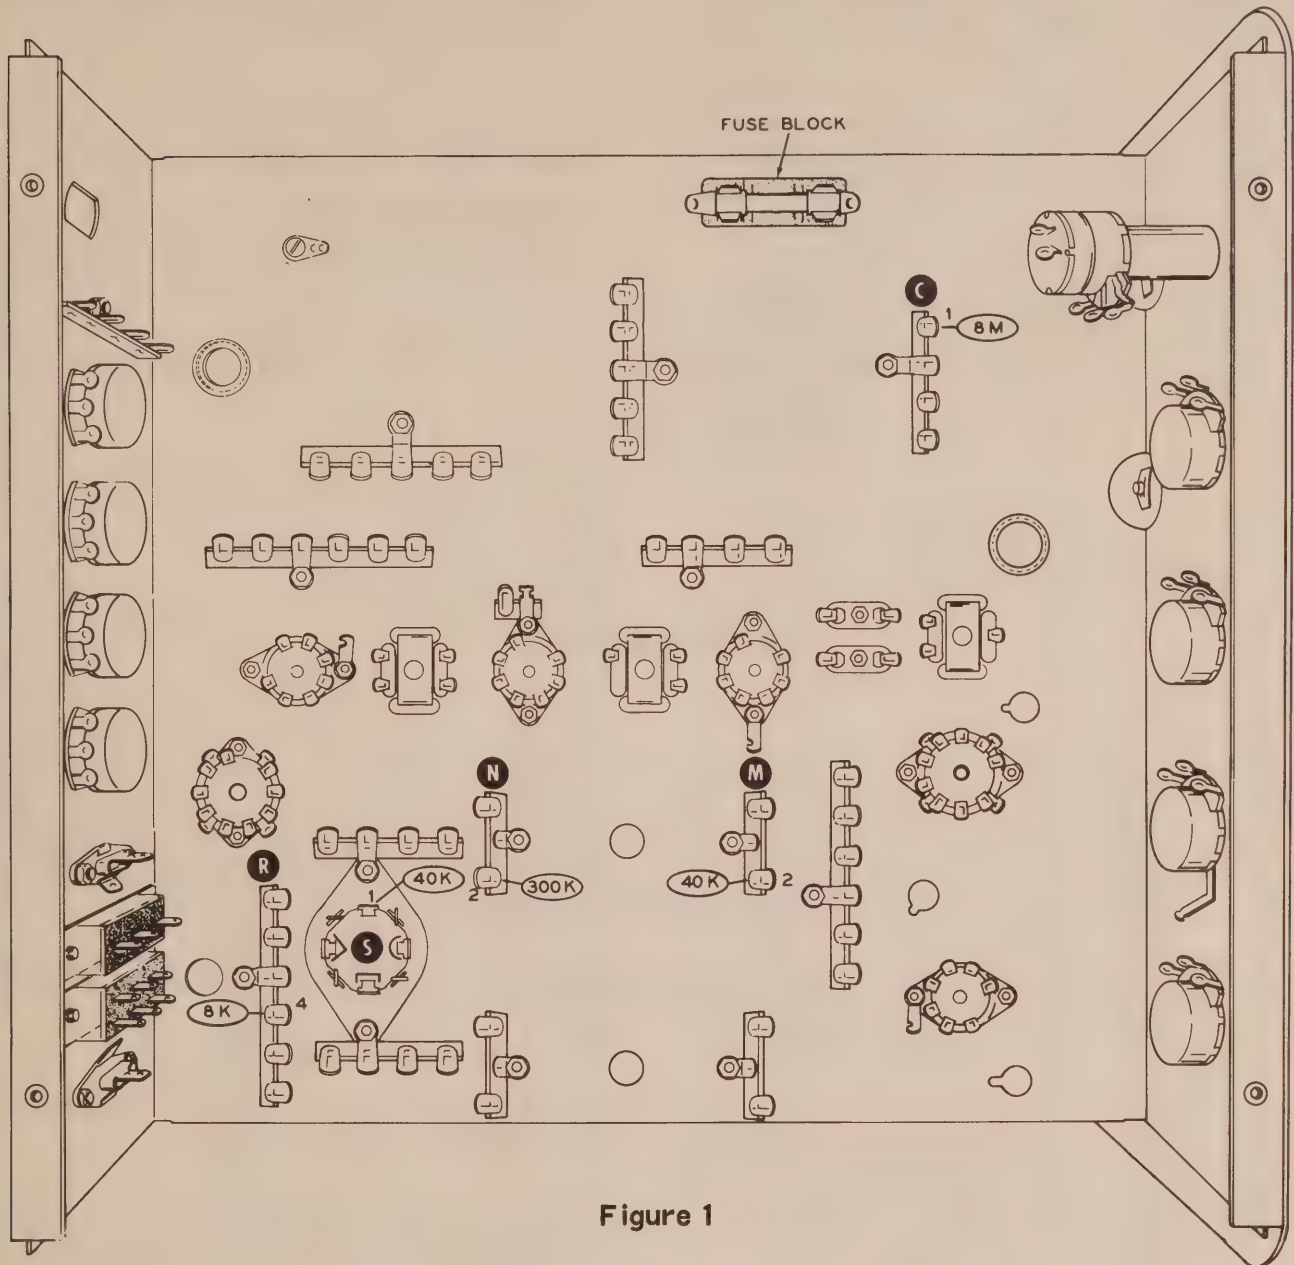


Figure 1

- ( ) Turn the INTENSITY control to approximately 3/4 of its rotation. This will turn the unit on. The pilot lamp should come on and, in a few seconds, the tube filaments should begin to glow. The neon lamp under the chassis should begin blinking.
- ( ) A horizontal line should appear on the face of the CRT. If no trace appears, rotate

both the HORIZ POS and VERT POS controls simultaneously until the horizontal line is centered on the CRT. NOTE: If only a spot appears, turn the VARIABLE SWEEP RATE control counterclockwise until a line does appear. If the line does not appear, refer to the first step in Alignment section and age the neon lamps.



- ( ) Adjust the INTENSITY control until the line is clearly visible, but not overly bright.
  - ( ) Adjust the FOCUS control for the sharpest line. It is not abnormal for this control to be in a fully clockwise position at this time.
  - ( ) Readjust the HORIZ POS and VERT POS controls so the trace line is directly behind the horizontal line on the grid screen.
  - ( ) Adjust the HORIZ WIDTH control until the trace extends just beyond the edges of the CRT face.
- If the line on the CRT is not perfectly horizontal, correct this condition as follows:
- ( ) Observe the position of the line on the CRT. Rotate the tube socket as necessary to level the trace line. Do not allow the face of the CRT to slide forward and come into contact with the grid screen. After leveling the trace line, tighten the tube base clamps.

## ALIGNMENT

NOTE: These alignment instructions should be followed in sequence because some adjustments must be made before other controls can operate properly. The Control Functions section of this Manual (Page 54) describes how each control should operate after alignment is completed.

- ( ) IMPORTANT: Turn the Scanalyzer on and let it run for at least one hour. Both neon lamps have to be "aged" for this period of time when new.
- ( ) Refer to Figure 2 and prepare the coil alignment tool by inserting the alignment tool blade (#205-254) into the small end of the nut starter.

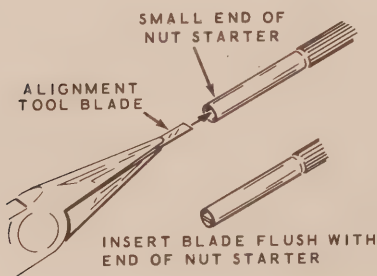


Figure 2

NOTE: There are two methods of aligning the Scanalyzer. Method 1 uses a calibrated RF signal generator with adjustable output control, while Method 2 requires that the unit be connected to a receiver. Method 1 is preferred, since it is more accurate.

### METHOD 1 - ALIGNMENT WITH INSTRUMENTS

#### 350 kHz Trap Coil Alignment

- ( ) Be sure the LOG ADJ control is in the full counterclockwise position.
- ( ) Connect the RF output connector of the signal generator to the IF INPUT socket of the Scanalyzer. An extra phono plug is provided for this purpose.
- ( ) Turn on the signal generator and tune it to 350 kHz (do not modulate the test signal).
- ( ) Set the PIP GAIN control fully clockwise.
- ( ) Turn up the signal generator output control. Then tune the generator to first one side then the other side of 350 kHz. The CRT trace will jump abruptly when the signal generator frequency is set at exactly 350 kHz.



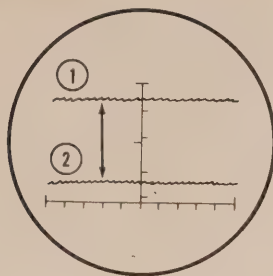


Figure 3

- ( ) Carefully adjust the signal generator to the point where the CRT trace moves as far above the screen base line as it will go, as shown at 1 of Figure 3. Reduce the signal generator output if the CRT trace moves upward and completely off the tube screen.

Refer to Figure 4 (fold-out from Page 53), for the locations of coils and transformers.

- ( ) Adjust the slug of coil L1 until the CRT trace moves down toward the screen base line. The correct adjustment of L1 is at the point where the CRT trace moves the closest to the screen base line. See 2 of Figure 3.

- ( ) Now increase the signal generator output and repeat the preceding two steps to make sure the CRT trace is positioned as near as possible to the screen base line.

NOTE: If the Scanalyzer was wired for an IF frequency other than 3395 kHz, also make the following adjustment:

- ( ) Adjust the slug of coil L2 until the CRT trace moves down toward the screen base line. Alternately adjust L1 and L2 until the CRT trace is positioned as near as possible to the screen base line.

This completes adjustment of the 350 kHz trap coil.

CHART 2

RECEIVER IF	L3 COIL NO.	APPROXIMATE COIL SETTING*
455 kHz	40-775	13 turns
1000 kHz	40-775	10 turns
1600 kHz	40-808	22-1/2 turns
1680 kHz	40-808	21 turns
2075 kHz	40-808	18 turns
2215 kHz	40-808	17 turns
2445 kHz	40-808	15 turns
3000 kHz	40-776	6 turns
3055 kHz	40-776	5-1/2 turns
3395 kHz	40-776	1/2 turn
5200 kHz	40-807	22-1/2 turns

\*Coil settings are shown here as a certain number of turns from the full counterclockwise position of the coil slug.

*Done*  
*7000 Hz*  
*10*  
*1000 Hz*



## Oscillator and Mixer Alignment

- ( ) Set the VARIABLE SWEEP RATE control fully counterclockwise.
- ( ) Refer to Figure 4 (fold-out from Page 53) and turn the slug of coil L3 counterclockwise until it is just snug.
- ( ) Refer to Chart 2, COIL SETTINGS on Page 39, and turn the slug of coil L3 clockwise the number of turns indicated for the receiver IF frequency for which the Scanalyzer was wired.
- ( ) Tune the signal generator to the IF frequency of your receiver and set the signal level to about 1 millivolt.

NOTE: Noise pulses, harmonics, and images of the signal generator frequency can cause false pips to appear on the CRT screen. The next step will tell you how to identify the proper pip.

- ( ) Slowly tune the signal generator on either side of the desired IF frequency while watching the CRT screen. One or more small pips may move across the screen. When the desired IF signal pip appears, it will normally fill the screen in a vertical direction. Carefully observe this pattern and remember the pip shape and size. Then reset the signal generator to the exact IF frequency of your receiver.

NOTE: The ASTIG control primarily affects the sharpness of the pip trace while the FOCUS control primarily affects the sharpness of the base line trace.

- ( ) Adjust the ASTIG control for a sharp clear pip trace. Then adjust the FOCUS control for a sharp base line trace. Alternately adjust both of these controls for a sharp, clear, pip and base line trace.
- ( ) Turn the slug of coil L3 until the IF signal pip is centered on the screen base line. If the top of the pip is off the CRT screen, reduce the signal generator output until the complete pip pattern is visible, as shown in Figure 5.

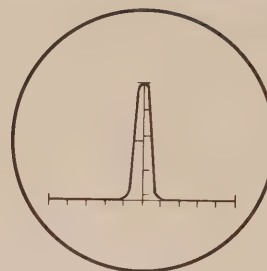


Figure 5

**IMPORTANT:** To make sure that oscillator coil L3 has been adjusted for the proper IF frequency, make the following checks and observations. Be sure the VARIABLE SWEEP WIDTH control is in its fully clockwise position. A "birdie" pip caused by the image frequency should be seen if you tune the signal generator exactly 700 kHz higher in frequency. This should place the "birdie" pip at the center of the screen. If the above conditions are met, oscillator coil L3 is properly set. This "birdie" pip should not be of concern in the normal application of the Scanalyzer, since 500 kHz is the maximum bandwidth required. In some units the pip may appear or disappear between the center and left-hand edge of the screen. This is a normal condition when the Variable Sweep Width control is in the fully clockwise position. It is due to the extremely wide band being swept by the sweep oscillator. This should not be of concern in the normal application of the Scanalyzer.

- ( ) Return the signal generator to the proper IF frequency.

NOTE: It is normal, in the next step, for the amplitude of the pip to increase as the sweep width becomes narrower.

- ( ) With the PIP CENTER control at its center of rotation, turn the VARIABLE SWEEP WIDTH control counterclockwise and observe the pip to see if it moves away from the center of the screen. If the pip moves from the center of the screen, readjust coil L3 to bring it back to the center. Keep rotating the VARIABLE SWEEP WIDTH control counterclockwise and readjusting coil L3 to keep the pip at the center of the screen.



- ( ) Now return the VARIABLE SWEEP WIDTH control to its fully clockwise position and see if the pip moves off center. If it does, alternately rotate the VARIABLE SWEEP WIDTH control back and forth and readjust coil L3 until the pip remains stationary on the screen, changing in amplitude only. NOTE: The point where the pip stays stationary may not be at the exact center of the screen. If this occurs, move the pip to the center of the screen by adjusting the HORIZ POS control. Check the trace to be sure it extends beyond the edges of the CRT. If not, readjust the HORIZ WIDTH control.

- ( ) Turn the Scanalyzer OFF.

### IF Alignment

- ( ) Temporarily remove both crystals.
- ( ) Refer to Figure 6, and connect a short jumper wire between lugs 1 and 2 of crystal socket Y2.

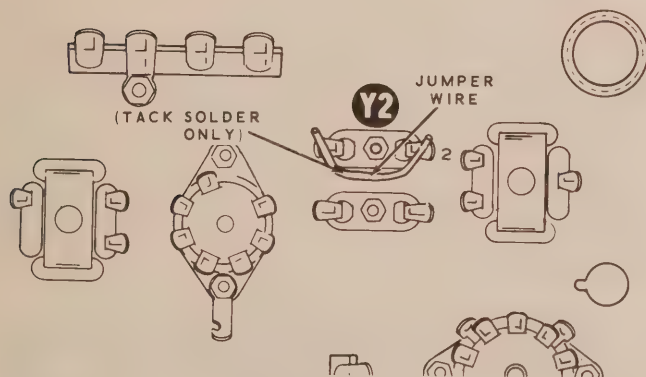


Figure 6

- ( ) Turn the Scanalyzer ON.
- ( ) Set the VARIABLE SWEEP WIDTH and VARIABLE SWEEP RATE controls fully clockwise.
- ( ) Adjust the signal generator output for a signal pip amplitude of about 3/4" high.
- ( ) Adjust the core of transformer T2 for maximum pip amplitude. Readjust the signal generator output for a 3/4" high pip.

- ( ) Adjust both the top and bottom cores of transformer T3 for maximum pip amplitude. Only a small adjustment should be necessary from the original preset position.
- ( ) Alternately adjust the cores of transformers T2 and T3 for the most symmetrical pip (as shown in Figure 7) while maintaining maximum pip amplitude.

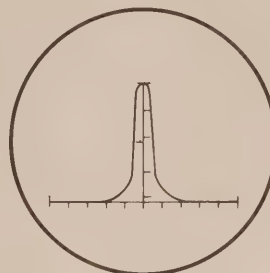


Figure 7

- ( ) Turn the Scanalyzer OFF.
- ( ) Remove the jumper wire from crystal socket Y2 and replace both crystals in their sockets.

### Logarithmic Amplitude Scale Calibration

- ( ) Refer to Figure 8 and temporarily connect a short jumper wire from lug 1 of the HAM SCAN-SPECTRUM ANALYZER switch BH to the center lug of the IF INPUT phono socket BG.


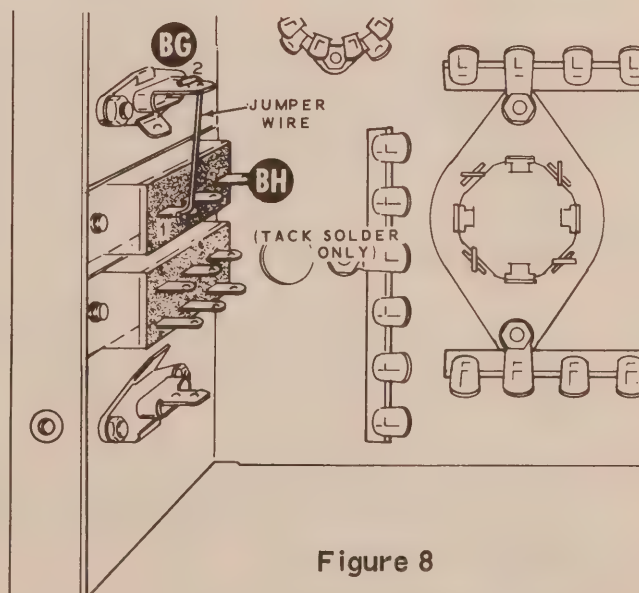


Figure 8



- ( ) Change the signal generator RF output cable from the IF INPUT phono socket to the RF INPUT phono socket.
- ( ) Set the 20 dB ATTEN switch at the OUT position.
- ( ) Turn the Scanalyzer ON.
- ( ) Set the VARIABLE SWEEP RATE control fully counterclockwise.
- ( ) Set the AMPLITUDE SCALE switch at the LOG position.
- ( ) Check to be sure the trace coincides with the base line. Readjust the VERT POS control if necessary.
- ( ) Adjust the signal generator output for a pip amplitude of 0 dB. (This is at the top of the vertical scale.) Make sure that the top of the pip is even with the cross line between LIN and LOG.
- ( ) Turn the LOG ADJ control clockwise until the top of the pip is even with the 10 dB mark.
- ( ) Adjust the signal generator output for a pip amplitude of 0 dB with the AMPLITUDE SCALE switch set at the LOG position.
- ( ) Now set the AMPLITUDE SCALE switch at the -20 dB LOG position.
- ( ) Adjust the -20 dB LOG ADJ control (located above the rear apron of the unit) until the top of the pip is even with the 20 dB mark on the screen.
- ( ) Readjust the signal generator output for maximum (but not higher than 0 dB) pip amplitude.
- ( ) Now set the AMPLITUDE SCALE switch back at the LOG position.
- ( ) Compare the pip on the CRT screen with the pip shown in Figure 10. If there is any ringing or flyback on either side of the pip, as shown in Figure 11, adjust the core of transformer T1 to minimize it. Only a slight adjustment should be necessary from the factory preset position.

Figure 9

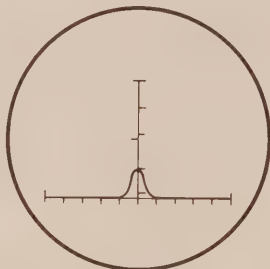

After the above adjustment, if there appears to be a considerable amount of ripple on both sides of the pip, or there are side pips such as shown in Figure 12 (with an unmodulated input signal), a possible cause is the neon lamp voltage regulator (NE-83-A). Refer to Pictorial 5, fold-out from Page 21, and interchange the two leads from lamp FC.

- ( ) Set the 20 dB ATTEN switch at the IN position and observe the pip. The top of the pip should be approximately even with the 30 dB mark as shown in Figure 9. This adjustment calibrates the logarithmic amplitude scale.
- ( ) Turn the Scanalyzer OFF.
- ( ) Remove the jumper wire that was connected between the HAM SCAN-SPECTRUM ANALYZER switch and the IF INPUT phono socket.
- ( ) Change the signal generator RF output cable from the RF INPUT phono socket to the IF INPUT phono socket.
- ( ) Turn the Scanalyzer back ON.

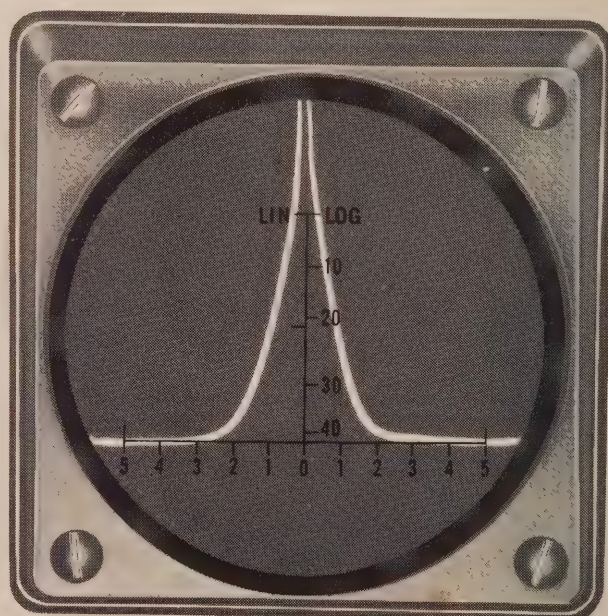


Figure 10



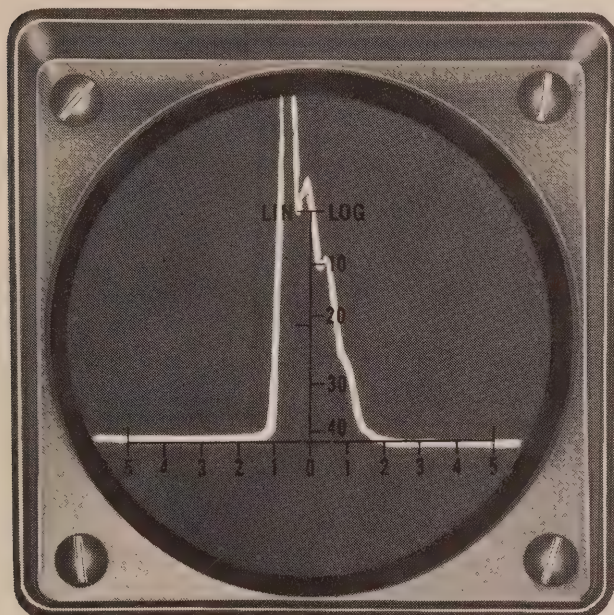


Figure 11

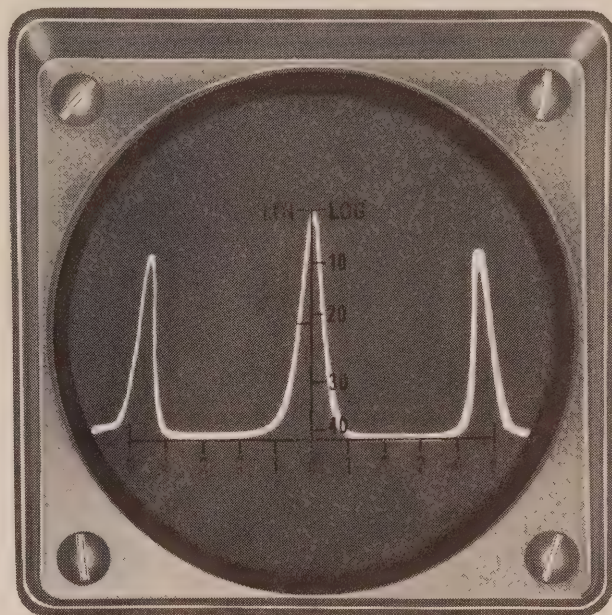


Figure 12

### Sweep Width Calibration

- ( ) Connect a high quality audio generator, such as the Heathkit IG-72 or AG-9, etc., to the Modulation input of the RF signal generator. NOTE: If you do not have a high quality audio generator, proceed directly to the next section, Connection To Receiver, and connect your Scanalyzer to your receiver as directed. Then turn back to Page 48 and perform the Sweep Width Calibration that is described under Alignment Method 2.
- ( ) Set the audio generator for a frequency of 50 kHz and adjust the audio output for 70% to 100% modulation of the RF signal.
- ( ) Adjust the signal generator output for a pip amplitude of 0 dB. Observe that there are three pips on the CRT screen. The center pip is the RF carrier signal and the two side pips are the modulation products of the 50 kHz audio signal.
- ( ) Adjust the VARIABLE SWEEP WIDTH control in a counterclockwise direction and observe that the two side tone pips will move towards the edges of the screen. Adjust this control until both side tone pips are over the 5 marks on the base line as shown in Figure 12. Use the PIP CENTER control to keep the carrier signal at the center of the screen.
- ( ) Observe where the pointer is set on the VARIABLE SWEEP WIDTH control. Make a note of this setting for future reference; this is the 100 kHz bandwidth setting.
- ( ) Set the audio generator for a frequency of 25 kHz.
- ( ) Place the SWEEP WIDTH control at the 50 kHz position.
- ( ) Repeat the procedure above, adjusting the VARIABLE SWEEP WIDTH control until the two side tone pips are over the 5 marks on the base line of the CRT screen.
- ( ) Again make note of the pointer setting for future reference; this is the 50 kHz bandwidth setting.
- ( ) Set the audio generator for a frequency of 5 kHz.
- ( ) Place the SWEEP WIDTH control at the 10 kHz position.
- ( ) Repeat the above procedure again and note the pointer setting for the 10 kHz bandwidth setting.



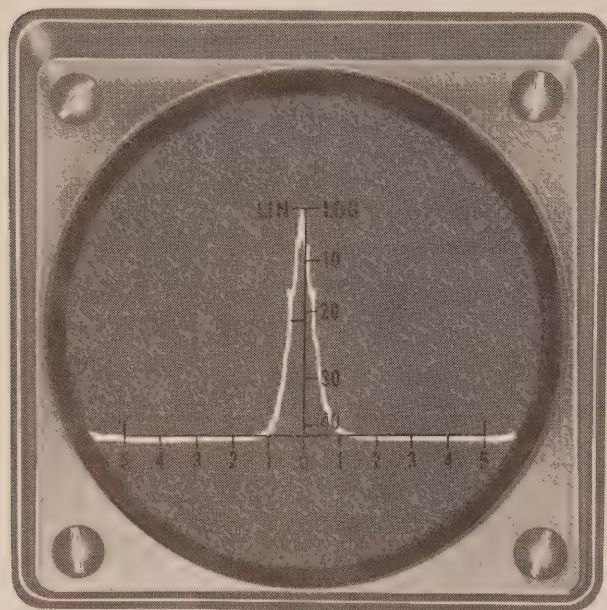


Figure 13

NOTE: Because of the narrow sweep width and slow sweep rate with the SWEEP WIDTH control at the 10 kHz position, the pip or pips may be somewhat wider than they were before. Also, depending on the signal source, there may be some hum causing the pip to have a ripple effect (see Figure 13).

This completes Scanalyzer Alignment Method 1. Turn to Connection To Receiver on Page 50.

## METHOD 2 - ALIGNMENT WITHOUT INSTRUMENTS

NOTE: This method of aligning the Scanalyzer is recommended only if no test instruments are available. To perform these adjustments, you will need either a receiver with a crystal calibrator or a receiver and a transmitter that has a spotting signal.

Refer to Figure 4 (fold-out from Page 53) for the locations of coils and transformers.

### 350 kHz Trap Coil Alignment

- ( ) Be sure the LOG ADJ control is in the full counterclockwise position.
- ( ) Cut two 3" hookup wires. Remove 1/4" of insulation from one end of each wire.

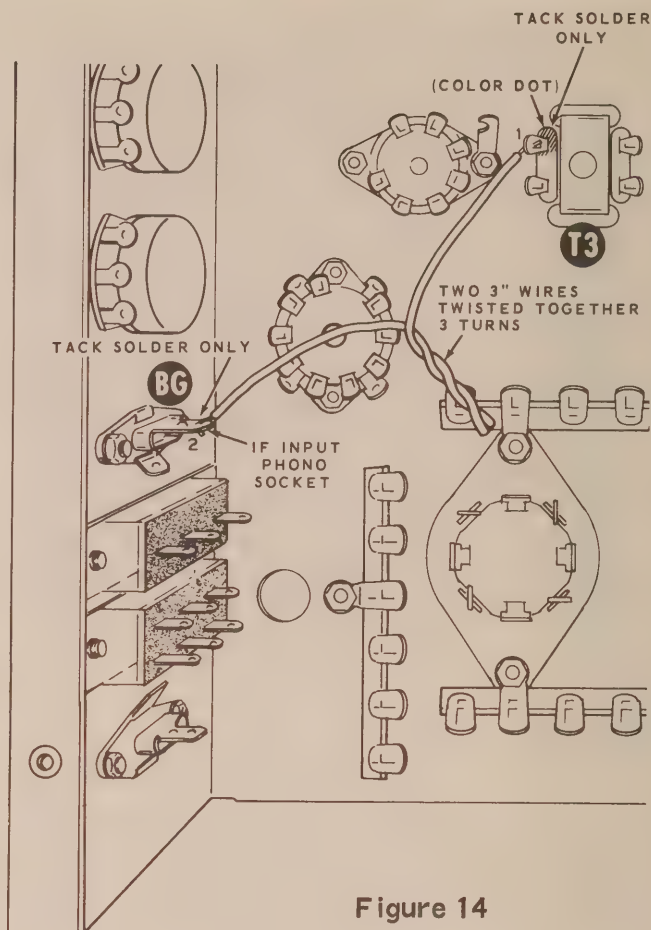


Figure 14

Refer to Figure 14 for the following three steps:

- ( ) Solder the stripped end of one wire to lug 1 of IF transformer T3.
- ( ) Solder the stripped end of the other wire to the center lug of the IF INPUT phono socket BG.
- ( ) Twist the free ends of these wires together for about three turns.
- ( ) Turn on the Scanalyzer and let it warm up for ten minutes.

NOTE: In this adjustment, a 350 kHz signal will be generated within the Scanalyzer due to a feedback path through the twisted wires and the high-gain IF strip. Oscillation will occur as the PIP



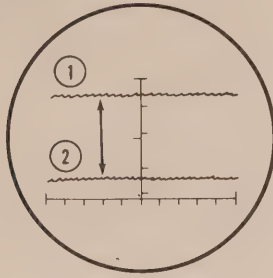



Figure 15

GAIN control is advanced clockwise. The CRT trace will abruptly deflect vertically. See Figure 15.

- ( ) Set the PIP GAIN control fully clockwise.
- ( ) Either twist more turns or untwist turns until the trace is at position 1 as shown in Figure 15. If the trace jumps completely off the screen, it may be necessary to untwist the wires completely and just have them near each other.
- ( ) Adjust the slug of coil L1 until the CRT trace moves down toward the screen base line. The correct adjustment of L1 is at the point where the CRT trace moves the closest to the screen base line.

NOTE: If the Scanalyzer was wired for an IF frequency other than 3395 kHz, also make the following adjustment.

- ( ) Adjust the slug of coil L2 until the CRT trace moves down toward the screen base line. Alternately adjust L1 and L2 until the CRT trace is positioned as near as possible to the screen base line.
- ( ) Adjust IF transformer T2 for maximum deflection in the upward direction, but keep the trace on the screen of the CRT by turning the PIP GAIN control counterclockwise.
- ( ) Turn the Scanalyzer OFF and remove the two twisted wires.

This completes adjustment of the 350 kHz trap coil.

## Oscillator and Mixer Alignment

- ( ) Connect the Scanalyzer to the receiver with which it will be used as directed in the Connection To Receiver section on Page 50.
- ( ) Turn the slug of coil L3 counterclockwise until it is just snug.
- ( ) Refer to Chart 2 on Page 39 and turn the slug of coil L3 clockwise the number of turns indicated for the IF frequency for which the Scanalyzer was wired.
- ( ) Set the VARIABLE SWEEP RATE control fully counterclockwise.
- ( ) Be sure the cable from the receiver is plugged into the IF INPUT phono socket on the rear apron.
- ( ) Disconnect any antenna from the receiver. If there is any signal feedthrough from the receiver antenna input terminal, it may be necessary to terminate the receiver's antenna input with a resistor matching the receiver's input impedance.
- ( ) Turn ON the Scanalyzer and the receiver (and the transmitter with the spotting signal) if one is being used.
- ( ) Tune in on the receiver, for maximum volume or S-meter reading, either the receiver's own calibrator signal or the spotting signal from a transmitter.

NOTE: When the Scanalyzer is connected to a transceiver without a crystal calibrator, use the "tune" position of the transceiver, with minimum output, for a signal source. This signal source can be used for all parts of this alignment procedure except the Sweep Width Calibration, where another signal source will be needed.

- ( ) Turn the PIP GAIN control fully clockwise.

**IMPORTANT:** In addition to the correct pip, which is from the received calibration or spotting signal, you may also see some false pips in the following step (these false pips are usually caused by harmonics, images, or noise pulses). Be sure you are using the correct pip before making the following adjustments. Refer to the following paragraphs to identify the correct pip.

Turn the signal source off. The correct pip (and any other signals that are coming from your signal source) will disappear from the screen. Turn the signal source on again.

Turn the receiver 10 or 20 kHz to one side of the tuned signal's center frequency. The amplitude of the correct pip, the one that corresponds to the signal being heard, should increase slightly in amplitude.

If a 100 kHz crystal calibrator is used for the signal source, and depending on the front end selectivity of the receiver being used, there could be as many as five pips of the same signal appearing at the same time, spaced approximately 100 kHz from each other on the screen. Peak the calibrator signal on the S-meter of the receiver; then detune slightly. Use the highest pip near the center of the screen.

- ( ) Turn the slug of coil L3 until the correct pip is centered on the screen base line. If the top of the pip is off the screen at the top of the CRT, reduce the PIP GAIN control setting until the complete pip pattern is visible as shown in Figure 16.

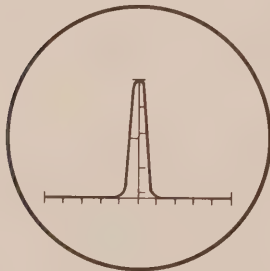


Figure 16

**NOTE:** The ASTIG control primarily affects the sharpness of the pip trace while the FOCUS control primarily affects the sharpness of the base line trace.

- ( ) Adjust the ASTIG control for a sharp, clear, pip trace. Then adjust the FOCUS control for a sharp base line trace. Alternately adjust both of these controls for a sharp, clear, pip and base line trace.

**NOTE:** It is normal, in the next step, for the amplitude of the pip to increase as the sweep width becomes narrower.

- ( ) With the PIP CENTER control set at center of rotation, turn the VARIABLE SWEEP WIDTH control counterclockwise and observe the pip to see if it moves away from the center of the screen. If the pip moves from the center of the screen, readjust coil L3 to bring it back to the center. Keep rotating the VARIABLE SWEEP WIDTH control counterclockwise and readjusting coil L3 to keep the pip at the center of the screen.
- ( ) Now return the VARIABLE SWEEP WIDTH control to its fully clockwise position and see if the pip moves off center. If it does, alternately rotate the VARIABLE SWEEP WIDTH control back and forth and readjust coil L3 until the pip remains stationary on the screen, changing in amplitude only. **NOTE:** The point where the pip stays stationary may not be at the exact center of the screen. If this occurs, move the pip to the center of the screen by adjusting the HORIZ POS control. Check the horizontal trace line to be sure it extends beyond the edges of the CRT. If not, readjust the HORIZ WIDTH control.

Turn the Scanalyzer OFF.

### IF Alignment

- ( ) Temporarily remove both crystals.
- ( ) Connect a short jumper wire between lugs 1 and 2 of crystal socket Y2 as shown in Figure 17.



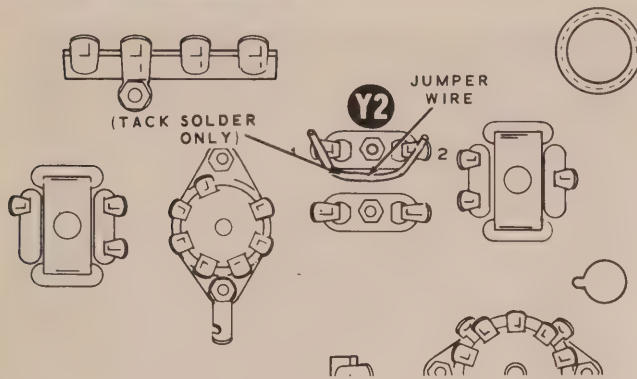


Figure 17

- ( ) Turn the Scanalyzer ON.
- ( ) Set the VARIABLE SWEEP WIDTH control fully counterclockwise and the VARIABLE SWEEP RATE control fully clockwise.
- ( ) Set the PIP GAIN control for a signal pip amplitude of about 3/4".
- ( ) Adjust the core of transformer T2 for maximum pip amplitude.
- ( ) Adjust both cores of transformer T3 for maximum pip amplitude. Only a slight adjustment should be necessary from the original preset position.
- ( ) Now, alternately adjust the cores of transformers T2 and T3 for the most symmetrical pip (as shown in Figure 18) while maintaining maximum pip amplitude.

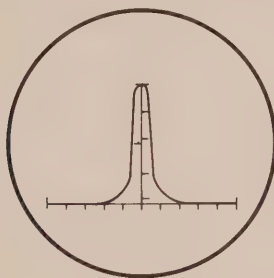


Figure 18

- ( ) Turn the Scanalyzer OFF.
- ( ) Remove the jumper wire from crystal socket Y2 and replace both crystals in their sockets.

## Logarithmic Amplitude Scale Calibration

- ( ) Refer to Figure 19 and temporarily connect a short jumper wire from lug 1 of the HAM SCAN-SPECTRUM ANALYZER slide switch (BH) to the center lug of the IF INPUT phono socket (BG).

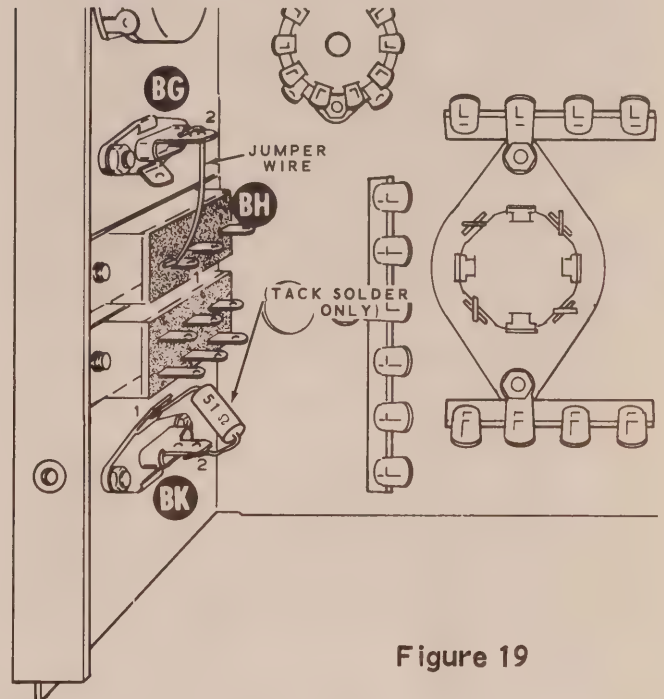


Figure 19

- ( ) Again refer to Figure 19 and temporarily connect one lead of a 51  $\Omega$  resistor from the center lug of the RF INPUT phono socket to its ground lug (BK).
- ( ) Change the receiver IF cable from the IF INPUT phono socket to the RF INPUT phono socket.
- ( ) Set the 20 dB ATTEN switch at the OUT position.
- ( ) Turn the Scanalyzer ON.
- ( ) Set the VARIABLE SWEEP RATE control at its fully counterclockwise position.
- ( ) Set the AMPLITUDE SCALE switch to the LOG position.
- ( ) Check to be sure the trace coincides with the base line. Readjust the VERT POS control if necessary.

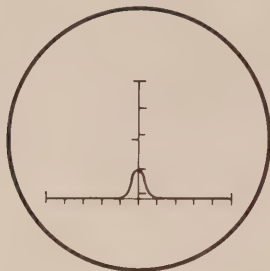


Figure 20

- ( ) Adjust the PIP GAIN control for an amplitude of 0 dB. (This is at the top of the vertical scale.) Make sure that the top of the pip is even with the cross line between LIN and LOG.
- ( ) Turn the LOG ADJ control in a clockwise direction until the top of the pip is even with the 10 dB mark.
- ( ) Set the 20 dB ATTEN switch at the IN position and observe the pip. The top of the pip should be approximately even with the 30 dB mark as shown in Figure 20. This adjustment calibrates the logarithmic amplitude scale.
- ( ) Turn the Scanalyzer OFF.
- ( ) Remove both the jumper wire and 51  $\Omega$  resistor.
- ( ) Relocate the receiver IF cable back to the IF INPUT phono socket.
- ( ) Turn the Scanalyzer back ON.
- ( ) Adjust the PIP GAIN control for a pip amplitude of 0 dB with the AMPLITUDE SCALE switch set at the LOG position.
- ( ) Now set the AMPLITUDE SCALE switch at the -20 dB LOG position.
- ( ) Adjust the -20 dB LOG ADJ control, located above the rear apron of the unit, until the top of the pip is even with the 20 dB mark on the screen.

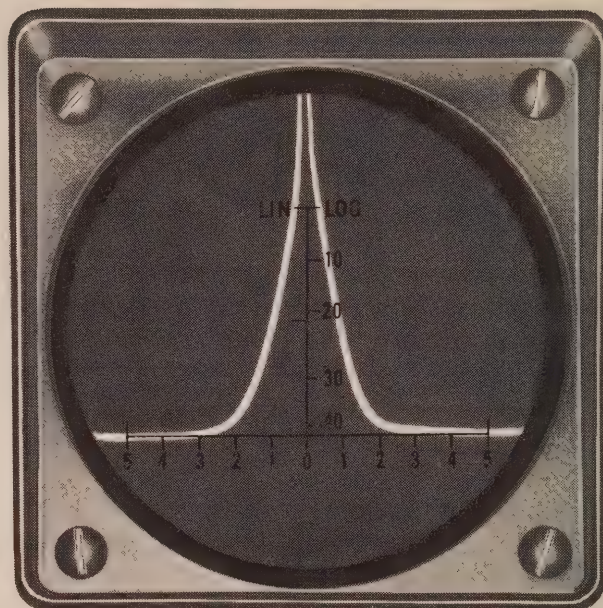


Figure 21

- ( ) Readjust the PIP GAIN control for maximum (but not higher than 0 dB) pip amplitude.
- ( ) Now set the AMPLITUDE SCALE switch back at the LOG position.
- ( ) Compare the pip on the CRT screen with the pip shown in Figure 21. If there is any ringing or flyback on either side of the pip, as shown in Figure 22, adjust the core of transformer T1 to minimize it. Only a slight adjustment should be necessary from the factory preset position.

After the above adjustment, if there appears to be a considerable amount of ripple on both sides of the pip, or there are side pips such as shown in Figure 22 (with an unmodulated input signal), a possible cause is the neon lamp voltage regulator (NE-83-A). Refer to Pictorial 5, fold-out from Page 21, and interchange the leads from lamp FC.

### Sweep Width Calibration

- ( ) Adjust the PIP GAIN control for an amplitude of 0 dB.
- ( ) Set the VARIABLE SWEEP WIDTH control fully clockwise.



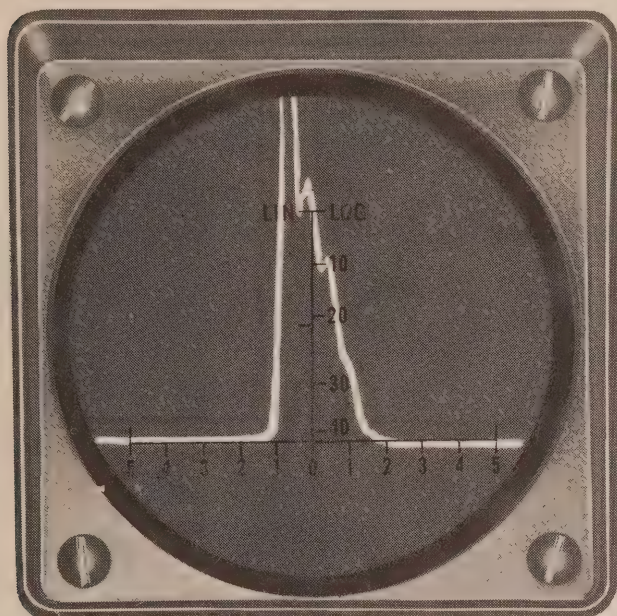


Figure 22

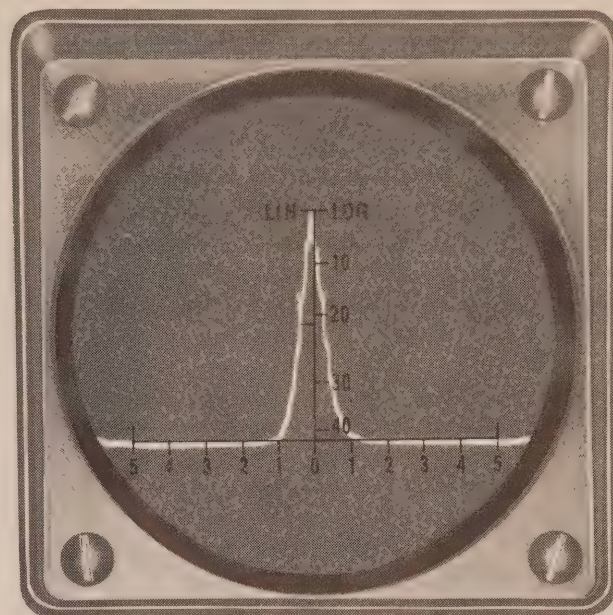


Figure 23

- ( ) Set the receiver exactly 50 kHz higher in frequency.
- ( ) Turn the VARIABLE SWEEP WIDTH control counterclockwise until the pip is over the 5 mark on the base line.
- ( ) Set the receiver back to the center frequency and, if necessary, use the PIP CENTER control to center the pip on the screen.
- ( ) Set the receiver exactly 50 kHz lower in frequency. The pip should be over the opposite 5 mark on the base line. It may be necessary to readjust both the VARIABLE SWEEP WIDTH and PIP CENTER controls to get both the pips to fall over these marks.
- ( ) Observe where the pointer is set on the VARIABLE SWEEP WIDTH control and make a note of this setting for future reference. This is the 100 kHz bandwidth setting.
- ( ) Place the SWEEP WIDTH control at the 50 kHz position.
- ( ) Set the receiver exactly 25 kHz higher in frequency.
- ( ) Repeat the procedure as above, adjusting the VARIABLE SWEEP WIDTH control until the pip is over the 5 mark on the base line. Set the receiver exactly 25 kHz lower than the center frequency. The pip should be over the opposite 5 mark on the base line.
- ( ) Again, make a note of the pointer setting of the VARIABLE SWEEP WIDTH control for future reference. This will be the 50 kHz bandwidth setting.
- ( ) Place the SWEEP WIDTH control at the 10 kHz position.
- ( ) Repeat the entire procedure, except set the receiver exactly 5 kHz on either side of center frequency.
- ( ) Again note the pointer setting of the VARIABLE SWEEP WIDTH control. This will be the 10 kHz bandwidth setting.

NOTE: Because of the narrow sweep width and slow sweep rate with the SWEEP WIDTH control at the 10 kHz position, the pip may appear wider than it did before. Also, depending on the signal source, there may be some hum causing the pip to have a ripple effect (see Figure 23).

This completes Scanalyzer Alignment Method 2. Refer to Final Assembly on Page 53.



## CONNECTION TO RECEIVER

The Scanalyzer is now ready to connect to your receiver. In most cases, the connection will be made to the plate lug of the mixer tube socket. Refer to the Receiver IF Chart, Chart 3, to find the proper connecting point. If your receiver is not listed in the chart, use your receiver's schematic to find the plate lug of the mixer tube socket.

If there is more than one mixer tube in your receiver, the connection should be made to the plate of the mixer tube into which the receiver variable oscillator signal is injected. NOTE: The connection must be made to the mixer plate ahead of the IF transformer, or crystal or mechanical filter, that is connected to the mixer plate. If the receiver signal passed through these selectivity-determining components before it was coupled to the Scanalyzer, the frequency response would be too narrow.

- ( ) Refer to Chart 3 and determine the value of coupling capacitor  $C_c$  that must be used for your receiver. The input signal will be coupled through this capacitor to the IF INPUT socket of the Scanalyzer. If your receiver is not listed, use the minimum value of coupling capacitor which produces a normal pip pattern on the Scanalyzer.
- ( ) Refer to the "Make Connection To" column in Chart 3 and determine the proper connecting point for capacitor  $C_c$  in your receiver (plate lug of mixer tube socket). Then locate this point on the Schematic (and appropriate pictorial, if available) for your receiver.

- ( ) Remove your receiver from its cabinet and locate the connecting point on the chassis.

NOTE: RG-62 cable (supplied with this kit) must be used inside your receiver and outside of it between it and the Scanalyzer.

- ( ) Determine how you will route the coaxial cable from the connecting point in your receiver to the IF INPUT socket of the Scanalyzer. Some receivers have an unused phono jack or terminal strip lug that can be used as a signal output terminal. If your receiver has no such unused connector, the coaxial cable will have to be routed to the Scanalyzer through a hole in the receiver chassis.

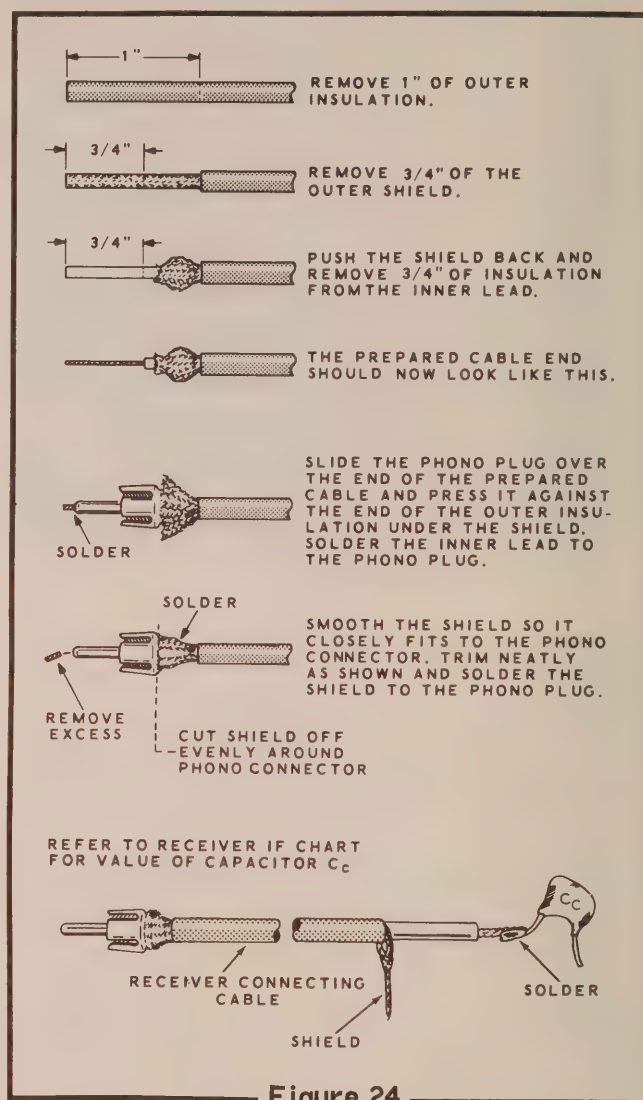


Figure 24

- ( ) Cut the coaxial cable to the proper length to reach either the unused connector or the IF INPUT socket of the Scanalyzer.

Prepare the coaxial cable as directed in only one of the next two steps. Use the step that applies to your installation.

- ( ) Refer to Figure 24 and prepare two coaxial cables, one with capacitor  $C_c$  attached to reach from the connecting point to the unused connector in your receiver, and the other to connect between the unused connector and the IF INPUT socket of the Scanalyzer.
- ( ) Prepare a coaxial cable as shown in Figure 24 with capacitor  $C_c$  at one end and a phono plug at the other end.



**CHART 3**  
**RECEIVER INTERMEDIATE FREQUENCIES**

MAKE	MODEL	IF (kHz)	MAKE CONNECTION TO	C <sub>c</sub> COUPLING CAPACITOR pf
HEATH	GC-1A	455	Collector of X2 (mixer)	12
	GR-54	1682	Pin 6 of V2 (6EA8)	7.5
	GR-91	455	Pin 5 of V1 (12BE6)	12
	HR-10	1681	Pin 6 of V2A (6EA8)	12
	HR-20	3000	Pin 6 of V2A (6EA8)	7.5
	MR-1	3000	Pin 6 of 6EA8 (mixer)	7.5
	RX-1	1681	Pin 5 of 6CS6 (1st mixer)	12
	SB-100	3395	Pin 6 of V12A (6EA8)	7.5
	SB-101	3395	Pin 6 of V12 (6EA8)	7.5
	SB-110,110-A	3395	Lug 1 of Y5 (crystal filter)	12
	SB-300	3395	Pin 5 of V3 (6AU6)	7.5
	SB-301	3395	Pin 5 of V3 (6AU6)	7.5
	SB-303	3395	Drain of Q204 (40673)	7.5
COLLINS	75S1, S2	455	Pin 6 of V3A (6U8A)	12
	75S3, S3B	455	Pin 6 of V4A	12
	75A Series	455	Pin 9 of V5 (6BA7)	12
DRAKE	2A, 2B	455	Pin 5 of V3 (6BE6)	12
HALLI-CRAFTERS	SX-100	1650	Pin 5 of V2 (6AU6)	12
	SX-101A	1650	Pin 5 of V2 (6BY6)	12
	SX-117	1650	Pin 5 of 2nd mixer (6BE6)	12
	SR-150	1650	Pin 6 of V17 (6EA8)	7.5
RME	6900	2195	Pin 6 of V2 (6U8)	7.5
SWAN	350	5174	Pin 5 of V7 (12BE6)	7.5

THE CONNECTING CABLE MUST BE CONNECTED TO THE PLATE OF THE MIXER TUBE JUST PRECEDING THE FIRST IF AMPLIFIER OF THE RECEIVER.

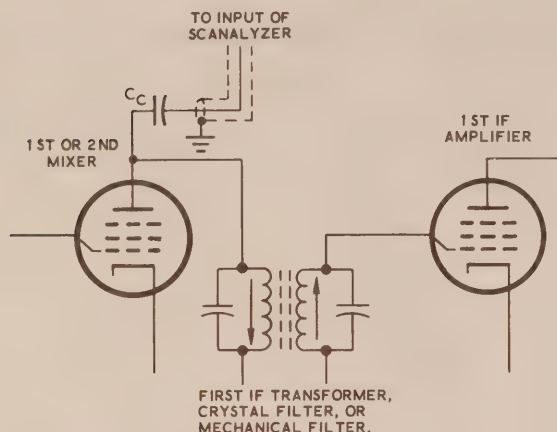


Figure 25

NOTE: It may be helpful to refer to Figure 25 for the next step.

- ( ) Connect the free lead of capacitor  $C_c$  to the connecting point for your receiver that was identified in the previous steps. Solder the connection. Use sleeving or tape on the capacitor leads if there is any chance of them shorting to another wire or lug, or the chassis.
- ( ) Connect the shield lead at the end of the coaxial cable near capacitor  $C_c$  to the closest ground point in your receiver.
- ( ) If you are using an unused phono jack or terminal strip lug in your receiver, connect the other end of the coaxial cable to this connector.
- ( ) Connect the coaxial cable from the receiver to the IF INPUT socket of the Scanalyzer and operate the units before reinstalling the receiver in its cabinet. If the connection has been made to the proper point, tuning the receiver across the band will move the signal pips across the CRT screen.

NOTE: If your receiver uses an IF transformer in the mixer plate circuit, be sure to readjust the primary coil slug of this transformer for maximum signal output after the Scanalyzer input cable is connected.

With the Scanalyzer connected to the same receivers, you may hear a series of "clicks" in the speaker output. This is due to the sweep oscillator signal of the Scanalyzer getting back into the receiver. This will usually occur only with the Sweep Width control in its fully clockwise position, and normally can be eliminated by turning the control slightly counterclockwise. If it still persists, adding a small value of resistance (i.e., 1000  $\Omega$ ) in series with coupling capacitor  $C_c$  will help reduce the effect.

- ( ) Reinstall the receiver in its cabinet, if necessary removing the connecting cable from the Scanalyzer input jack.
- ( ) Reconnect the cable from your receiver to the Scanalyzer.

This completes the connecting procedure.

NOTE: Disregard the next paragraph and proceed to Final Assembly if you used Method 2 - Alignment Without Instruments.

If you used Alignment Method 1 and, for lack of the proper AF signal generator, did not complete the Sweep Width Calibration (Page 38), refer back now to Page 48 and complete the Sweep Width Calibration steps for Alignment Method 2. Then proceed to Final Assembly.



## OPERATION

Read this section carefully so you will be aware of the several ways in which this versatile instrument can be used. Figures 40-1 through 40-8 (fold-out from Page 54) and Figures 40-9 through 40-13 (fold-out from Page 63) show many of the actual traces which you will see on the face of the CRT. Refer to these illustrations as you read this section of the Manual.

### CONTROL FUNCTIONS


The following paragraphs describe what each control does. Names of controls, connectors, and switches are shown as they are lettered on the instrument. If an abbreviated name is lettered on the instrument, the complete name is given in parentheses after the abbreviation. Refer to Figure 27.

### Front Panel Controls

**INTENSITY:** Turns the unit ON or OFF. Adjusts the brilliance of the screen presentation.

**FOCUS:** Adjusts the sharpness of the base line trace.

**VARIABLE SWEEP WIDTH:** Used as a variable adjustment for the bandwidth of the frequency spectrum shown on the screen. With the control fully clockwise, the maximum spectrum width is seen. As the control is turned counterclockwise, the bandwidth becomes narrower and the part of the spectrum being viewed is expanded across the screen. This control is normally used with the SWEEP WIDTH switch at the VARIABLE position, but it is also used to calibrate the

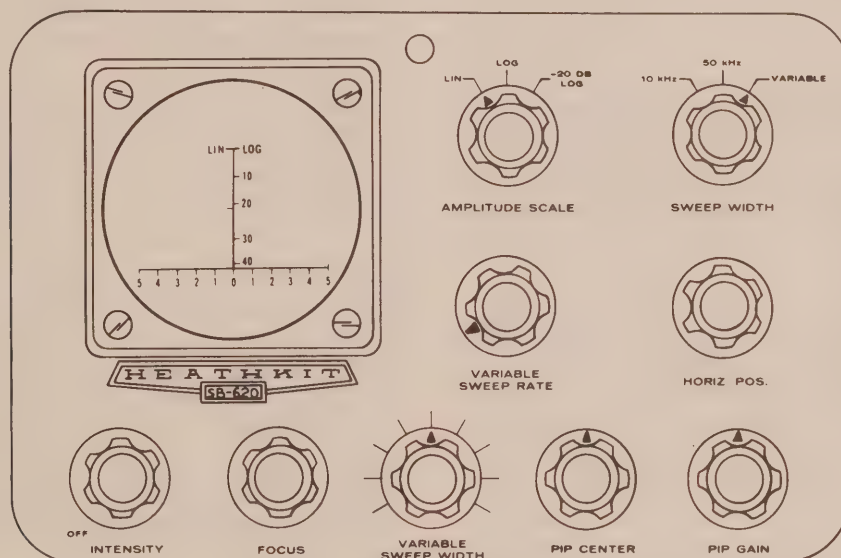

NOTE: CONTROLS ARE SHOWN IN THEIR NORMAL POSITION FOR HAM-SCAN USE. IF NO KNOB POINTERS (OR SCREWDRIVER SLOTS FOR REAR APRON CONTROLS) ARE ILLUSTRATED IT INDICATES THAT THE CONTROL SHOULD BE ADJUSTED TO PRODUCE THE DESIRED EFFECT.

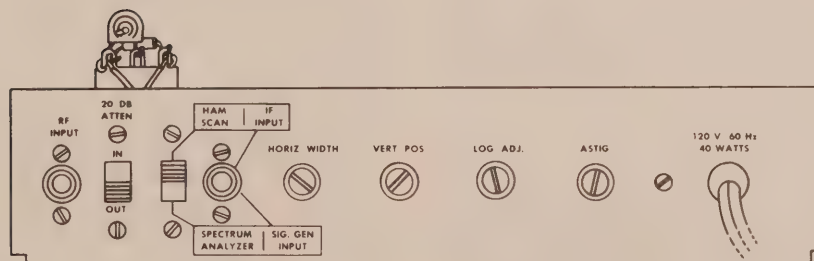


Figure 27

screen base line when the SWEEP WIDTH switch is at either the 50 kHz or 10 kHz preset positions.

**PIP CENTER:** Normally used to place the signal pip at the center of the CRT screen. When a bandwidth of 100 kHz or less is viewed, the signal pip can also be placed at either edge of the CRT screen. This allows a band of frequencies to be viewed that is either higher or lower than the center mean frequency of the local sweep oscillator.

**PIP GAIN:** Adjusts the pip height on the CRT screen. Maximum gain is obtained at the full clockwise position.

**VARIABLE SWEEP RATE:** Provides continuously adjustable scanning rates between 5 Hz to 15 Hz. This control is normally used when the SWEEP WIDTH switch is at the VARIABLE position, although it has some vernier effect in the 10 kHz or 50 kHz positions. Clockwise rotation increases the sweep rate.

**HORIZ POS (Horizontal Position):** Adjusts the position of the base line trace along the horizontal axis. This control allows the operator to adjust the signal pip to the center of the CRT screen if small inaccuracies occur between the PIP CENTER control and the local sweep oscillator.

Pushing in on the HORIZ POS control actuates a momentary contact switch which temporarily speeds up the sweep rate when the SWEEP WIDTH switch is at either the 10 kHz or 50 kHz positions. This makes it easier to center the signal pip on the CRT screen at the slower sweep rates.

**AMPLITUDE SCALE:** Selects either a linear or logarithmic amplitude presentation. In the LOG position, signals whose amplitude differs by as much as 40 dB (100:1) in amplitude may be viewed simultaneously on the screen using the calibration marks on the right side of the vertical calibrated line. In the LIN (Linear) position, signals are displayed with their amplitudes displaced linearly on the screen.

A third position of this switch, -20 dB LOG, causes the IF system to attenuate the signal 20 dB. This permits you to study signals over a dynamic range of 60 dB (1000:1). Under these conditions, only the lower 40 dB portion is displayed on the CRT screen. (See Distortion Measurement, Page 62.)

**SWEEP WIDTH:** Selects fixed sweep widths of 10 kHz and 50 kHz or a VARIABLE sweep width. In the VARIABLE position, the operator can adjust the sweep width by using the VARIABLE SWEEP WIDTH control. In the preset positions, the SWEEP WIDTH switch automatically sets the IF gain and selects the proper filtering for the detected signal pip.

## Rear Apron Controls

**-20 dB LOG ADJ (-20 dB Logarithmic Adjustment):** Adjusted for the proper bias on V3 when the AMPLITUDE SCALE switch is at the -20 dB LOG position. Once the bias is adjusted for the proper 20 dB of attenuation in this stage, it need not be readjusted unless tube V3 is changed.

**RF INPUT:** A test signal is coupled into this socket and used only when the HAM SCAN-SPECTRUM ANALYZER switch is at the SPECTRUM ANALYZER position. This input is matched for 50  $\Omega$  coaxial cable.

**20 dB ATTEN (20 dB Attenuation):** When this switch is at the IN position, 20 dB of attenuation is connected to the RF INPUT socket and applied to the test signal.

**IF INPUT-SIG GEN (Signal Generator) INPUT:** This is the input socket for the IF signal from your receiver (the HAM SCAN-SPECTRUM ANALYZER switch must be in the HAM SCAN position). When the HAM-SCAN-SPECTRUM ANALYZER switch is in the SPECTRUM ANALYZER position, the signal from a variable frequency signal source, such as an RF signal generator, may be coupled into this socket.

**HAM SCAN-SPECTRUM ANALYZER:** With this switch at the HAM SCAN position, a sampling of your receiver's IF frequency may be coupled to the IF INPUT-SIG GEN socket of the Scanner.

When this switch is in the SPECTRUM ANALYZER position, the signal from a signal generator is coupled into the IF INPUT-SIG GEN socket. At the same time, a test signal is coupled into the RF INPUT socket. The signal generator frequency is chosen so the difference between it and the test signal is equal to the input frequency for which the Scanner is wired (IF frequency).



**HORIZ WIDTH (Horizontal Width):** Adjusts the length of the base line trace.

**VERT POS (Vertical Position):** Adjusts the position of the base line trace along the vertical axis. The trace is normally positioned behind the horizontal, calibrated base line.

**LOG ADJ (Logarithmic Adjustment):** Determines the operating point for the proper logarithmic characteristic of second IF amplifier V4. This control is adjusted only when the **AMPLITUDE SCALE** switch is set at the **LOG** position.

**ASTIG (Astigmatism):** This control (in conjunction with the **FOCUS** control) is adjusted only when there is a signal pip on the CRT screen to produce a clear, sharp trace.

### SCANNING A BAND

- ( ) Plug the receiver IF output cable into the IF INPUT phono socket at the rear of the Scanalyzer.

Set the controls of the Scanalyzer as follows:

- ( ) **HAM SCAN-SPECTRUM ANALYZER** switch: **HAM SCAN**.
- ( ) **INTENSITY:** Turn the unit on with this control and set it for medium brightness of the display on the CRT.
- ( ) **FOCUS:** Adjust for sharpest and clearest trace.
- ( ) **VARIABLE SWEEP WIDTH:** Set the pointer at the previously calibrated 100 kHz bandwidth setting.
- ( ) **PIP CENTER:** Center of rotation.
- ( ) **PIP GAIN:** Fully clockwise.
- ( ) **VARIABLE SWEEP RATE:** Fully counter-clockwise.
- ( ) **HORIZ POS:** Center the trace horizontally on the screen.
- ( ) **AMPLITUDE SCALE:** **LIN** position.
- ( ) **SWEEP WIDTH:** **VARIABLE** position.

- ( ) Turn your receiver on and let it warm up. If it has an RF gain control, be sure it is set for maximum. Signal pips should appear along the CRT screen base line, indicating stations within the bandwidth being displayed.
- ( ) Adjust the **PIP CENTER** control to position the signal being heard at the center of the screen base line.
- ( ) Adjust the **PIP GAIN** control for the desired display height. NOTE: To observe signals of comparable amplitude (10:1 or less) the **AMPLITUDE SCALE** switch should be set to the **LIN** position. Examination of signals widely divergent in amplitude will require that this control be set in the **LOG** position, which will allow you to observe signals that differ as much as 40 dB in amplitude.

### Operational Discussion

If your receiver has a crystal calibrator, tune the receiver so the tone is audible. Turn the calibrator on and off several times while turning the **PIP GAIN** control and watching the CRT screen. Position the calibrator signal pip at the center of the screen base line with the **PIP CENTER** control.

If it is impossible to center the calibrator signal pip with the **PIP CENTER** control, it can be assumed that the signal generator used to adjust coil L3 was off calibration. Therefore, it will be necessary to readjust coil L3 to position the calibrator signal pip to the center of the screen. Refer to **Oscillator And Mixer Alignment**, either Method 1 (Page 38) or Method 2 (Page 44).

In most SSB receivers a certain amount of BFO signal, called the BFO leakage signal, will appear as a stationary pip. This is unavoidable; however, it does provide a handy reference pip for proper centering. This pip will disappear if the receiver can be switched to the AM mode.

When a desired signal appears to move in a direction opposite to that expected, it is due to heterodyning circuitry of the receiver being used (whether the HF oscillator is positioned above or below the incoming signal).

False signals (birdies) may appear on the screen along with the signal pips. Birdies are usually receiver and Scanalyzer oscillator-mixer frequency products which fall in the band of the frequencies being viewed. Some of their characteristics are:

1. They are not audible when tuned to the center of the screen.
2. They move across the CRT screen at a different rate and/or direction than the audible signal pips.
3. They will appear with no antenna connected to the receiver.
4. They will appear when the receiver RF gain control is at minimum.

The amount of AGC (or AVC) developed by different receivers varies considerably. In one receiver the AGC may only affect the pip amplitude of the signal being heard, with those pips at either side of the audible pip remaining unchanged. In another receiver, the entire display will be affected. Generally, some level of AGC (in variable RF gain receivers) can be found that will provide both sufficient pip amplitude and normal AGC action in the receiver.

The overall frequency width displayed on the CRT can be checked at any time in the following manner: Tune the receiver (or calibrating instrument) to place a specific signal pip at one end of the screen base line and note the frequency of the receiver. Then tune the receiver to place this same pip at the other end of the screen and again note the receiver frequency. The overall displayed frequency width will be equal to the difference between these two frequencies.

The base line also can be calibrated by dividing the displayed frequency width by 10 to indicate the approximate frequency difference between the individual calibration marks. The approximate bandwidth of a signal can then be determined by using the calibration marks.

When calibrating the base line, use even numbered (100 kHz, 200 kHz, 500 kHz, etc.) bandwidths. Thus, the base line calibration marks can be interpolated to read frequency directly. For example, if the VARIABLE SWEEP WIDTH control is set for a 500 kHz bandwidth, each calibration

mark will be equal to 50 kHz. Additional examples:

200 kHz  $\div$  10 = 20 kHz for each calibration mark.  
 100 kHz  $\div$  10 = 10 kHz for each calibration mark.  
 50 kHz  $\div$  10 = 5 kHz for each calibration mark.  
 10 kHz  $\div$  10 = 1 kHz for each calibration mark.

When a calibrating signal is used to mark the edges of the band, any out-of-band operation can be seen. This will be helpful if you contact DX stations whose operating frequency is outside of your authorized amateur bands.

The Scanalyzer, when used with a general coverage receiver, will locate harmonics and/or spurious radiation from your transmitter. Use a dummy load on the transmitter and no (or very little) antenna on the receiver. Set the SWEEP WIDTH control of the Scanalyzer to maximum. Key the transmitter and tune the receiver while watching the CRT screen (listen to the receiver also) for spurious signals and harmonics. This same method can also be used to null the carrier of a filter-type SSB transmitter or the unwanted sideband of a phasing-type transmitter.

In receivers using transformer coupling between the mixer and IF amplifier stages, the passband response may fall off sharply on both sides of the center (IF) frequency. In receivers using crystal or mechanical filters after the mixer stage, the response is quite flat for  $\pm 50$  kHz or more from the center (IF) frequency. The amplitude of the signal pips will therefore depend upon the receiver passband response. When tuning a receiver having a crystal or mechanical filter, the amplitude of the signal pip will decrease when it becomes audible. This is because the filter impedance becomes very low at its resonant frequency.

## Narrow Band Analysis

Closer analysis of received on-the-air signals can be made if the sending transmitter uses constant carrier or steady tone modulation of the carrier. Because of the slower sweep rates in the 10 kHz or 50 kHz positions of the SWEEP WIDTH control, any quick amplitude variations could be missed. See Narrow Band Analysis, Page 62. Refer also to Spectrum Analyzer Applications, which follows.



## IDENTIFYING CRT PATTERNS

If proper adjustments have been made, the signal being heard from the receiver will appear at the center of the screen base line. CW, AM, RTTY, SSB, and electrical interference signals may be identified as shown in Figures 28 through 36. The width of the signal pip will depend on the setting of the SWEEP WIDTH control.

**Figure 28 - Normal SSB:** Since an SSB signal is only present during modulation, the pip will appear only when there is modulation present. The pip outline will also have peaks and valleys corresponding to the many voice frequencies.

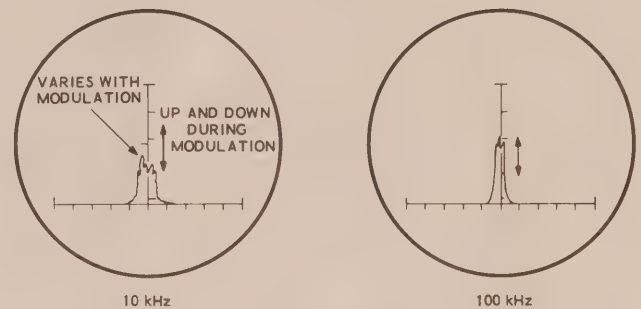


Figure 28

**Figure 29 - Normal AM:** Under no modulation the carrier will appear continuous. During modulation, the sides of the carrier will vary accordingly. These are the sidebands of an AM carrier.

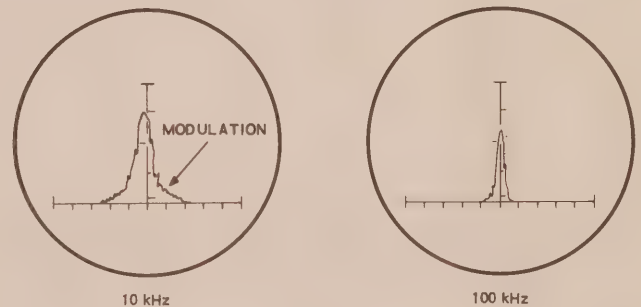


Figure 29

**Figure 30 - CW:** The pip of a CW signal will appear each time the transmitter is keyed. In the event of high speed CW, certain characters will not appear on the screen. This is due to the relatively slower sampling rate of the reactance modulator. In other words, a fast "dit" will appear in the receiver passband and disappear faster than all the signals in the passband are being sampled.

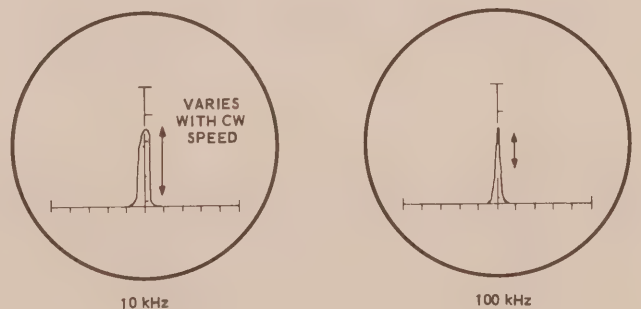


Figure 30

**Figure 31 - Overmodulated AM:** Very wide sidebands will appear with the carrier of an overmodulated AM signal. The approximate width can be measured by knowing the base line calibration.

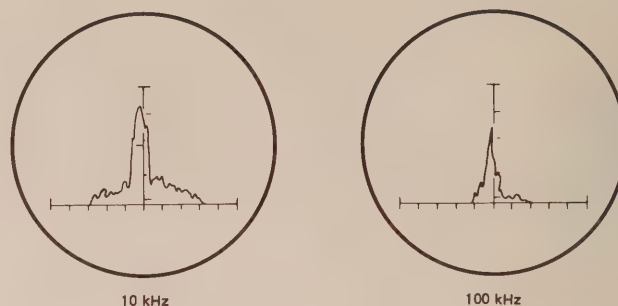


Figure 31

**Figure 32 - Interfering AM Signals:** The adjacent sidebands of two interfering AM signals will add and subtract giving the effect of a very wide AM signal with the center of the pip varying up and down. These two separate carriers may be seen if they are far enough apart in frequency.

**Interfering SSB signals -** two interfering SSB signals will appear as a single, wide SSB signal with each half varying up and down at different rates.

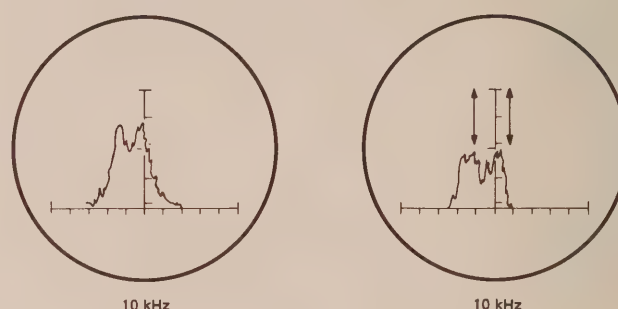


Figure 32

**Figure 33 - RTTY:** Teletype signals will appear as an unmodulated carrier with a slight amount of sideways shift and, depending on the type of RTTY system, a certain amount of vertical shifting.

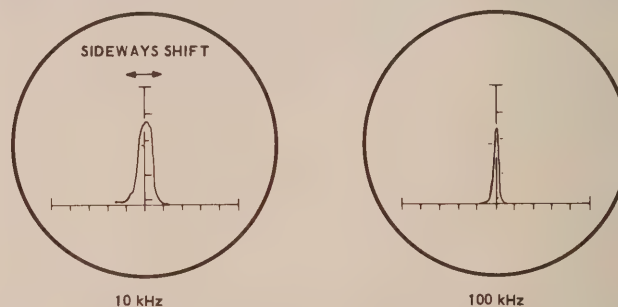


Figure 33

**Figure 34 - Ignition Noise:** Usually a series of sharp pulses that move back and forth or all in one direction.

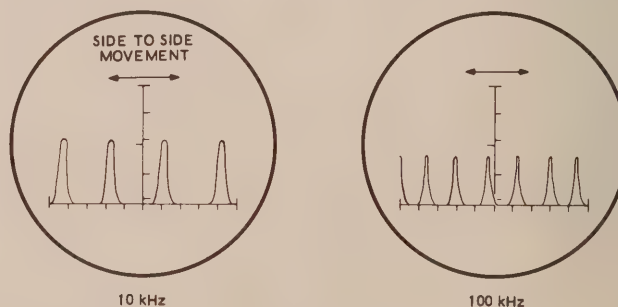


Figure 34



**Figure 35 - Random Noise:** This type of noise appears in numerous forms. Usually a noise pulse from electrical equipment, etc., is sharp and appears only briefly on the scope. A static burst is usually much wider, usually stationary on the screen, and lasts somewhat longer.

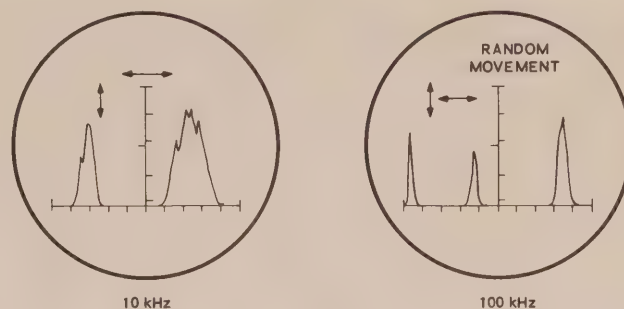


Figure 35

**Figure 36 - Background Noise:** This type of noise has the appearance of grass and is usually much lower in amplitude than the above types of noise. It gives a hissing sound in a speaker.

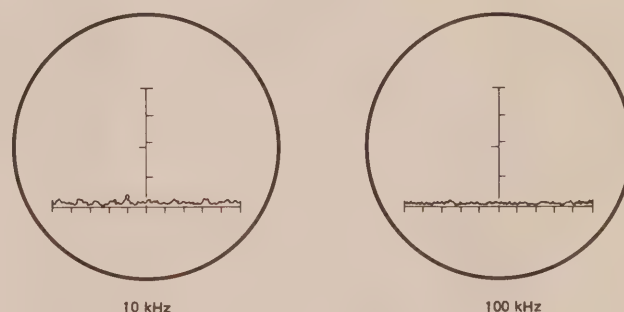


Figure 36

### The Scanalyzer As A Basic Test Instrument

**NOTE:** A good quality RF signal generator that is stable and hum-free, and is capable of at least a 100 mV output, is required for the following type of operation.

The Scanalyzer, when used as a spectrum analyzer, can be used to check such things as oscillator stages for harmonic levels, parasitics, etc.; mixer stages for signal and oscillator feed-through and mixer products; and linear amplifiers for distortion products. See Figure 37 and refer to the following instructions.

- ( ) Connect the output cable of the RF signal generator to the SIG GEN INPUT phono socket on the Scanalyzer.
- ( ) Place the HAM SCAN-SPECTRUM ANALYZER switch at the SPECTRUM ANALYZER position.

- ( ) Make up a test lead of small 50  $\Omega$  coaxial cable (not provided) with a phono socket installed at one end. See Figure 38. The cable should be long enough to reach from the Scanalyzer to the circuit being tested.

**NOTE:** Do not perform the next two steps if you intend to inductively couple the test signal to the free end of the input cable.

- ( ) Connect a 51  $\Omega$  (green-brown-black) resistor between the center conductor and shield at the other end of the coaxial cable. See Figure 38.

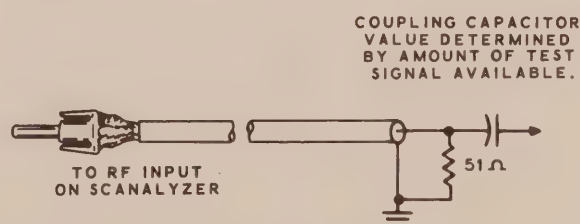


Figure 38

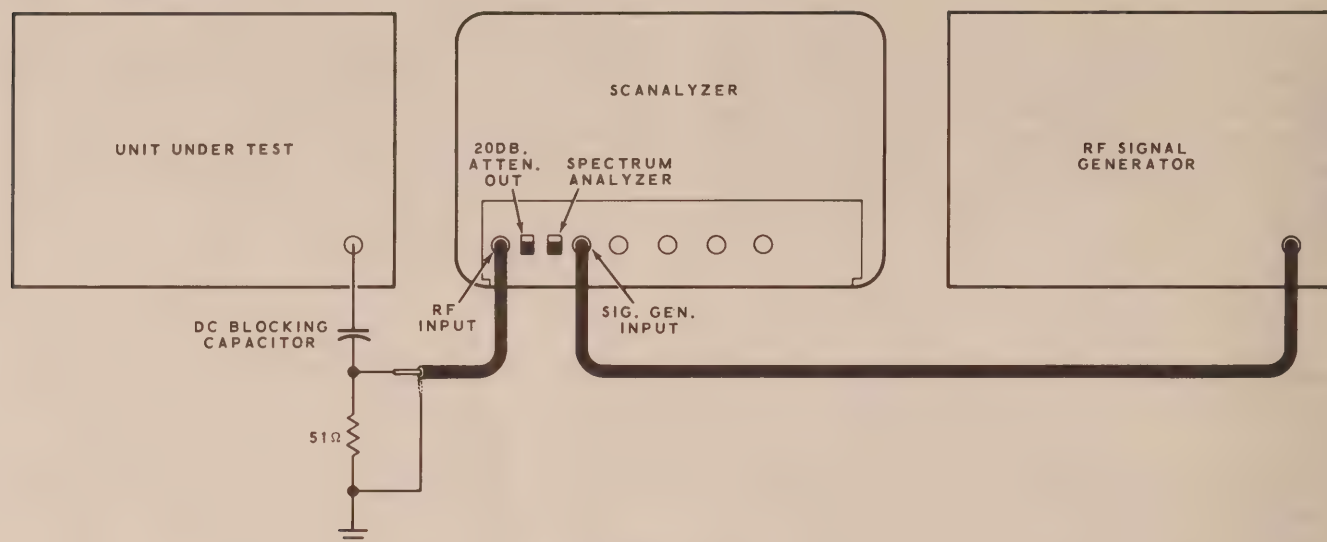


Figure 37

- ( ) If the signal to be tested has a DC component, connect one lead of a blocking capacitor to the center conductor at this same end of the coaxial cable. See Figure 38.

NOTE: Disregard the next step if you performed the previous two steps.

- ( ) For inductive coupling, connect a small loop of wire between the center conductor and shield at the open end of the coaxial cable. See Figure 39. The number of turns you will need in the loop will be determined by the amount of test signal available.

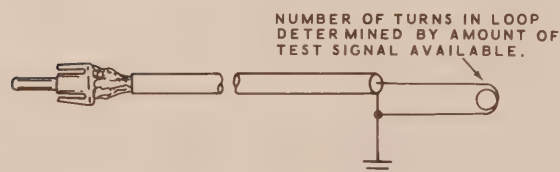


Figure 39

The RF signal generator frequency should be set to the test signal frequency, plus the IF frequency for which the Scanalyzer is wired. For example, if the test signal to be observed is 3500 kHz and the Scanalyzer is wired for an IF of 455 kHz, then the signal generator is set at 3955 kHz (3500 kHz + 455 kHz) to place the test signal pip at the center of the CRT screen.

Another example could be a 50.1 MHz test signal with the Scanalyzer wired for an IF input frequency of 3395 kHz. The signal generator should then be set at a frequency of 53.495 MHz (50.1 MHz + 3.395 MHz).

The amplitude control on the RF signal generator should be set to insert at least 0.1 volt of signal into the Scanalyzer.

To locate the signal, it may be convenient to operate the Scanalyzer at maximum gain and the signal generator at a high output. Once the signal is located, the signal generator output should be decreased. Also, use the minimum amount of test signal into the Scanalyzer that will give sufficient pip amplitude on the CRT screen. The 20 dB ATTN switch may also be used to reduce the test signal input. Slowly search the spectrum by turning the signal generator until the signal appears at the center of the screen.

- ( ) Plug the coaxial cable test lead into the RF INPUT phono socket on the Scanalyzer. Couple the other end of the test lead to the circuit under test.



To find harmonics or spurious signals, follow the above procedure and slowly search the suspected band segment by turning the signal generator. **IMPORTANT:** Depending on the input frequency of the Scanalyzer and the signal generator being used, there could be spurious signals developed from a combination of the two units. Therefore, make a preliminary search of the band segment before applying the test signal in order to recognize any spurious signals that may be present.

### NARROW BAND ANALYZER

When signals, or a carrier and its sidebands, are so closely spaced in frequency that at full sweep width their pips tend to merge together, it may be possible to separate or resolve them by placing the SWEEP WIDTH switch at the 50 kHz or, if necessary, at the 10 kHz positions. See Figures 40-1 through 40-8 (fold-out from Page 54), and Figures 40-9 through 40-13 (fold-out from Page 63). Resolution of 1 kHz or more is possible at the 10 kHz position. Maximum resolution of the Scanalyzer is with the SWEEP WIDTH switch in the 10 kHz position and with both the VARIABLE SWEEP RATE and VARIABLE SWEEP WIDTH controls at their full counterclockwise positions. (Resolution is defined as the frequency separation between two equal adjacent signals, such that the intersection between their respective pip indications is 30% below the apex amplitude.)

### DISTORTION MEASUREMENT

To measure third-order distortion in an SSB (single-sideband) transmitter or exciter, modulate the transmitter with two audio tones of equal amplitude, with a difference frequency of the order of 1 kHz to 2 kHz. The RF output will consist of two signals separated by the audio difference frequency. If third-order distortion is present in the transmitter, spurious signals will appear that are higher and lower in frequency (by an amount equal to the difference frequency) than the two desired RF signals.

Your Scanalyzer can be used for third order distortion measurements as described in the following steps.

- ( ) To display two RF signals on the screen, follow the procedure listed under the heading "The Scanalyzer As A Basic Test Instrument," and connect the test signal cables as shown in Figure 37, except that the connection between the unit under test and the Scanalyzer should be made as shown in Figure 41. **NOTE:** Be sure the two audio signals modulating the transmitter are low in harmonic content or that the two tones selected are such that their harmonics fall outside the passband of the filter in the transmitter.

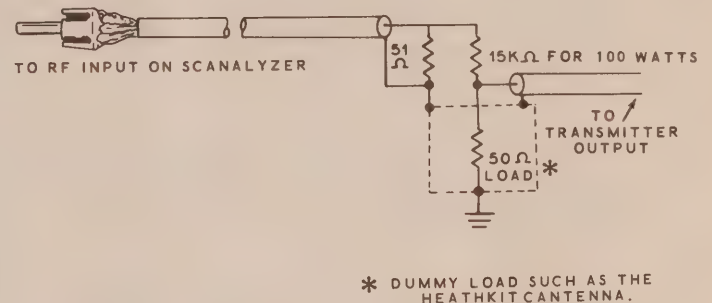


Figure 41

- ( ) Set the SWEEP WIDTH switch at the 10 kHz position. Push in on the HORIZ POS control for the fast sweep and center the two pips on the screen with the PIP CENTER control.
- ( ) Set the AMPLITUDE SCALE switch to the -20 dB LOG position. Adjust the PIP GAIN control until the pips are at the 0 dB mark on the vertical amplitude scale.
- ( ) Set the AMPLITUDE SCALE switch to the LOG position. The CRT display now shows signals from -20 dB to -60 dB below the peak amplitude of the two input signals. The amplitude of third-order distortion pips can be read from the vertical scale on the CRT screen, adding 20 dB to account for the fact that the input signals are deflected 20 dB over full scale.

## IN CASE OF DIFFICULTY

1. Recheck the wiring. Trace each lead in colored pencil on the Pictorial as it is checked. It is frequently helpful to have a friend check your work. Someone who is not familiar with the unit may notice something consistently overlooked by the builder.
  2. About 90% of the kits that are returned for repair do not function properly due to poor connections and soldering. Therefore, many troubles can be eliminated by reheating all connections to make sure that they are soldered as described in the Soldering section of the Kit Builders Guide.
  3. Check to be sure that all tubes are in their proper locations. Make sure that all tubes light up properly.
  4. Check the tubes with a tube tester or by substitution of tubes of the same types known to be good.
  5. Check the values of the parts. Be sure that the proper part has been wired into each point in the circuit, as shown in the pictorial diagrams and as called out in the wiring instructions.
  6. Check for bits of solder, wire ends or other foreign matter which may be lodged in the wiring.
  7. If, after careful checks, the trouble is still not located and a suitable meter is available, check resistance and voltage readings against those shown (fold-out from Page 64). NOTE: All voltage readings were taken with an 11 megohm input vacuum tube voltmeter. The use of a volt-ohm-milliammeter may load the circuit and result in a lower reading. Voltage and resistances may vary as much as 20%.
  8. A review of the Circuit Description will help indicate where to look for trouble.
  9. Refer to the Troubleshooting Chart on Page 65 for further help in locating causes of trouble.
  10. Voltage and resistance measurements are given in Figures 42 (Page 64), 43, and 44 (fold-out from Page 64).
- NOTE: In an extreme case where you are unable to resolve a difficulty, refer to the "Customer Service" information inside the rear cover of the Manual. Your Warranty is located inside the front cover of the Manual.



## SWEEP WIDTH

Place AMPLITUDE SCALE  
Switch in LIN position

## AMPLITUDE SCALE

Place SWEEP WIDTH  
Switch in 10 kHz position

	VAR		50 kHz		10 kHz	
LUG	Volts	Ohms	Volts	Ohms	Volts	Ohms
16	-0.5	200 K	-0.5	200 K	-0.5	200 K
15		Inf		Inf		200 K
13		Inf		200 K		Inf
11		200 K		Inf		Inf
9	285	3 M	105	7.5 M	57	9 M
7		150 M		100 M		9 M
6		28 M		7.5 M		22 M
5		3 M		4 M		4.5 M
4	0	60	0.3	5 K	0.4	6.5 K
3		2330 $\Omega$ Max.		2330 $\Omega$ Max.		2330 $\Omega$ Max.
2		530 $\Omega$ Max.		530 $\Omega$ Max.		530 $\Omega$ Max.
1		60		60		60

	-20 DB LOG		LOG		LIN	
LUG	Volts	Ohms	Volts	Ohms	Volts	Ohms
2	-3	500 K	0	0	0	0
1		0		0		0
12		0		0		0
11		500 K		500 K		500 K
10	-0.5	400 K	-0.5	400 K	0	0
9		0		0		0
8		350 K		350 K		350 K
7		350 K		350 K		350 K
6	0.5	100	0.5	100	0.7	100
5		70 K		70 K		100
4		100		100		100 K
3		100		100		100 K

FAST SWEEP  
SW VOLTS

Open	Closed
445	362

Normal Reading at Center Lug:

## HOR. POS.

Volts	Ohms	Volts	Ohms
70	450 K	60	9 M

VAR. SWEEP  
RATE

## NOTES:

- VOLTAGE AND RESISTANCE MEASUREMENTS TAKEN WITH A VTVM HAVING 11 MEGOHMS INPUT RESISTANCE WITH COMMON LEAD TO CHASSIS.
- RESISTANCES ARE IN OHMS.  
K = 1000  
M = 1,000,000  
INF = INFINITY
- P DESIGNATES THE CONTACT FOR A POLE OF THE SWITCH.


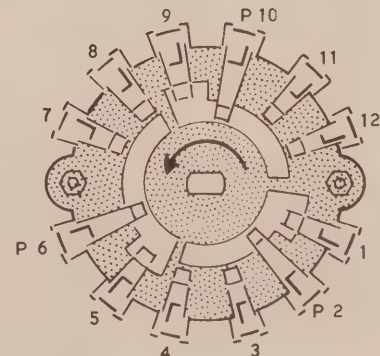


Figure 42

## Troubleshooting Chart

SYMPTOMS	SUGGESTED CAUSE OR TEST
Tube filaments do not light; no B+ voltage.	<ol style="list-style-type: none"> <li>1. Open fuse in fuseholder.</li> <li>2. Open switch on rear of Intensity control.</li> <li>3. Power transformer wired incorrectly.</li> </ol>
Tube filaments light but no B+ voltage.	<ol style="list-style-type: none"> <li>1. Power transformer wired incorrectly.</li> <li>2. Defective silicon diode (D4 through D7) or diode incorrectly installed.</li> <li>3. Open transformer winding.</li> </ol>
Filaments in tubes V3, V4, and V6 light (AC) but filaments in tubes V1, V2, and V5 do not light.	<ol style="list-style-type: none"> <li>1. Defective silicon diode (D8 through D11) or diode incorrectly installed.</li> <li>2. Filter capacitor C54 shorted or installed backwards.</li> </ol>
Low B+ voltage.	<ol style="list-style-type: none"> <li>1. Shorted filter capacitor.</li> <li>2. Open or incorrectly installed silicon diode.</li> </ol>
No trace, regardless of control settings.	<ol style="list-style-type: none"> <li>1. Check voltage readings at CRT socket on lugs 6, 7, 9, and 10. NOTE: Observe extreme care as voltages are dangerously high.</li> <li>2. Selenium diode D2 or D3 improperly connected or faulty.</li> </ol>
Spot on CRT but no horizontal deflection.	<ol style="list-style-type: none"> <li>1. Check tube V6.</li> <li>2. Check voltages on socket V6.</li> <li>3. Check voltages at lugs 6 and 7 of CRT socket V7.</li> <li>4. Sweep Width switch wired incorrectly.</li> <li>5. Neon lamp NE-83-B defective or not "aged" long enough.</li> </ol>
No vertical deflection.	<ol style="list-style-type: none"> <li>1. Check voltages at lugs 9 and 10 of CRT socket V7.</li> <li>2. Check voltages on V1, V2, V3, V4, and V5.</li> <li>3. Open transformer T1, T2, or T3.</li> <li>4. Shorted or open receiver connector cable.</li> <li>5. Improper connection to receiver.</li> <li>6. Wired for wrong receiver IF frequency.</li> </ol>
Sweep oscillator V2 not sweeping.	<ol style="list-style-type: none"> <li>1. Diode D1 defective or improperly connected. (Resistance of D1 when disconnected should be 10 to 15 <math>\Omega</math> forward and 10 megohm or more reverse.)</li> <li>2. Coil L3 improperly connected or open.</li> <li>3. No sweep voltage from V6.</li> </ol>



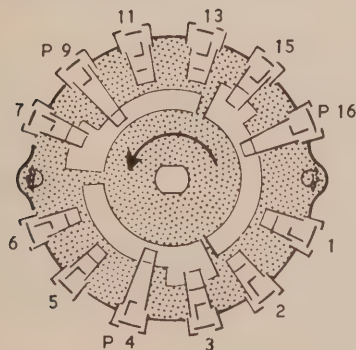

SYMPTOMS	SUGGESTED CAUSE OR TEST
Improper negative bias at D1.	<ol style="list-style-type: none"> <li>1. Diode D1 improperly connected or defective.</li> <li>2. Open or wrong resistors connected to Pip Center control.</li> <li>3. Defective Pip Center control.</li> <li>4. Filter capacitor C1 shorted or installed backwards.</li> </ol>
No sweep voltage to diode D1.	<ol style="list-style-type: none"> <li>1. Diode D1 improperly connected or defective.</li> <li>2. Open or wrong resistors connected to Variable Sweep Width control.</li> <li>3. Defective Variable Sweep Width control.</li> </ol>
Poor focusing.	<ol style="list-style-type: none"> <li>1. Improper connections to Focus control, or defective control.</li> <li>2. Check C47, C48, C49, R76, R78, and R79. NOTE: Some defocusing at the ends of the trace is normal and will not interfere with the Scanalyzer operation.</li> <li>3. ASTIG control improperly adjusted.</li> <li>4. Protective covering on grid screen not removed.</li> </ol>
Double pips from single input signal.	<ol style="list-style-type: none"> <li>1. Resistor R8 not grounded.</li> <li>2. Variable Sweep Width control set at full clockwise position.</li> <li>3. Signal input too strong.</li> </ol>
Retrace line shows on CRT screen.	<ol style="list-style-type: none"> <li>1. Intensity set too high.</li> </ol>
Pips appear on screen base line when Pip Center control is turned, or pips appear with no signal input.	<ol style="list-style-type: none"> <li>1. Defective Pip Center control.</li> <li>2. Open or improper resistors connected to Variable Sweep Width control.</li> </ol>
Pip distorted.	<ol style="list-style-type: none"> <li>1. Transformer T1, T2, or T3 not tuned properly.</li> <li>2. Variable Sweep Rate control set too high.</li> </ol>
CRT base line jumps abruptly while tuning receiver.	<ol style="list-style-type: none"> <li>1. Coil L1 improperly tuned.</li> <li>2. Coil L1 open.</li> <li>3. Capacitor C9 defective or not soldered.</li> </ol>
CRT base line does not fill screen.	<ol style="list-style-type: none"> <li>1. Check voltages on V6.</li> <li>2. Defective Horizontal Width control or incorrect value of resistance.</li> <li>3. Capacitor C43 defective.</li> </ol>

## SPECIFICATIONS

### RF AMPLIFIER

Input Frequencies (Receiver IF) . . . . .	One of the following: 455 kHz, 1000 kHz, 1600 to 1680 kHz, 2075 kHz, 2215 kHz, 2445 kHz, 3000 kHz, 3055 kHz, 3395 kHz, or 5200 kHz.
Frequency Response. . . . .	$\pm 0.5$ dB at $\pm 50$ kHz from receiver IF.
IF Frequency. . . . .	350 kHz.
Sensitivity. . . . .	Approximately 10 $\mu$ v input signal provides a visible signal (40 dB mark) at full pip gain setting.
Spectrum Analyzer. . . . .	Test signal input frequencies up to 50 MHz.

### HORIZONTAL DEFLECTION

Horizontal Sweep Generator. . . . .	Sawtooth sweep produced by neon lamp relaxation oscillator.
Sweep Rate (Approximate Frequencies). . . . .	10 kHz preset: 0.5 Hz. 50 kHz preset: 2 Hz to 2.5 Hz. Variable: 5 Hz to 15 Hz.
Preset Sweep Width. . . . .	10 kHz preset: 10 kHz. 50 kHz preset: 50 kHz.

Variable Sweep Width* . . . . .	IF	SWEEP WIDTH
	455 kHz	10 kHz to 100 kHz
	1000 kHz	50 kHz to 500 kHz
	1600 kHz	50 kHz to 500 kHz
	1680 kHz	50 kHz to 500 kHz
	2075 kHz	50 kHz to 500 kHz
	2215 kHz	50 kHz to 500 kHz
	2445 kHz	50 kHz to 500 kHz
	3000 kHz	100 kHz to 500 kHz
	3055 kHz	100 kHz to 500 kHz
	3395 kHz	100 kHz to 500 kHz
	5200 kHz	100 kHz to 500 kHz

\*These sweep widths are minimum values. Actual sweep width ranges will be greater than those listed, depending on the receiver IF frequency for which unit is wired.



Resolution. . . . . 1 kHz.

NOTE: Resolution is defined as the frequency separation between two equal adjacent signals such that the intersection between their respective pip indications is 30% below the apex amplitude.

Amplitude Scales. . . . . Linear: 20 dB (10:1) range.  
Log: 40 dB (100:1) range.  
-20 dB Log: (Extends calibrated range to 60 dB)

## POWER SUPPLY

Type. . . . . Transformer operated; fused at 1/2 ampere.

Low Voltage. . . . . Full-wave voltage doubler circuit, using four silicon diodes.

High Voltage. . . . . Full-wave voltage doubler circuit, using two selenium diodes.

Bias Voltage. . . . . Full-wave bridge circuit, using four silicon diodes.

Power Requirements. . . . . 120 or 240 volts AC, 50/60 Hz, 40 watts.

## GENERAL

Tube Complement. . . . . 1 - 3RP7 CRT, high persistence (yellow trace with screen filter).  
1 - 6AT6, detector vertical amplifier.  
1 - 6AU6, IF Log amplifier.  
1 - 6EA8, sweep oscillator, mixer.  
1 - 6EW6, RF amplifier.  
1 - 6EW6, IF amplifier.  
1 - 12AU7, horizontal, push-pull amplifier.

Diode Complement. . . . . 8 - Silicon diodes, low voltage rectifier, DC filament rectifier.  
2 - Selenium diodes, high voltage rectifiers.  
1 - Silicon diode, voltage-variable capacitor.

Cabinet Dimensions. . . . . 6-5/8" high x 10" wide x 10-1/2" deep.

Net Weight. . . . . 10 lbs.

The Heath Company reserves the right to discontinue instruments and to change specifications at any time without incurring any obligation to incorporate new features in instruments previously sold.



## CIRCUIT DESCRIPTION

Refer to the Schematic (fold-out from Page 77) and the Block Diagram below while reading this Circuit Description. NOTE: The Schematic Diagram shows three possible RF amplifier-to-mixer coupling circuits. The one used will depend on the IF frequency of your receiver.

Basically, the Scanalyzer is a receiver combined with an oscilloscope. The mixer stage of the Scanalyzer is automatically swept across a band of frequencies that centers around the IF passband of the receiver to which it is connected. Each of the received signals in this IF passband is then tuned in for a moment as the high frequency (mixer) oscillator sweeps by it; the received signals are then displayed in the form of vertical pips on the cathode ray tube.

### RF AMPLIFIER


The band of frequencies to be viewed is centered on your receiver's IF frequency. Input signals are taken from the receiver's mixer plate and coupled through capacitor  $C_c$  to the grid of RF amplifier tube V1 (the response of most receivers is usually quite broad at the mixer plate). The Pip Gain control in the grid circuit of V1 controls the amount of signal applied, thereby controlling the height of the pip displayed on the CRT screen. Coil L1 and capacitor C9 form a trap circuit which effectively shorts to ground any 350 kHz signal at the input (350 kHz is the IF frequency of the Scanalyzer.)

The signal from V1 is coupled to mixer tube V2A through one of the three coupling circuits shown at the bottom of the Schematic. A tuned circuit, RFC 1 and its capacitor C14 (Optional mixer circuit #1), is used only when the Scanalyzer is operated with receivers with a 455 kHz IF. This circuit is tuned to about 420 kHz to restore the amplitude of the signal in this frequency area and compensate for any attenuation due to the 350 kHz trap. A bandpass filter with a bandwidth of 500 kHz (#2) is used when the Scanalyzer is operated with receivers having an IF of 3395 kHz. This circuit will attenuate most unwanted signals from the receiver that may enter the instrument and cause "birdies" to appear on the screen. All other receiver IF frequencies use only resistive coupling, as shown by resistor R31 in coupling circuit #3.

When the Scanalyzer switch is placed in the Spectrum Analyzer position, the cathode bypass capacitor for V1 is removed from the circuit. RF amplifier stage V1 then becomes a mixer with a test signal injected on its cathode and an external signal generator coupled to its grid circuit. The signal generator frequency is selected to mix with the test signal frequency to produce the receiver IF frequency for which the front end of the Scanalyzer is wired. A 20 dB attenuator switch is incorporated in the RF input (cathode) circuitry.

### SWEEP OSCILLATOR V2B

The high frequency oscillator signal that is coupled to mixer tube V2A is supplied by the sweep oscillator circuit of tube V2B. Tube V2B

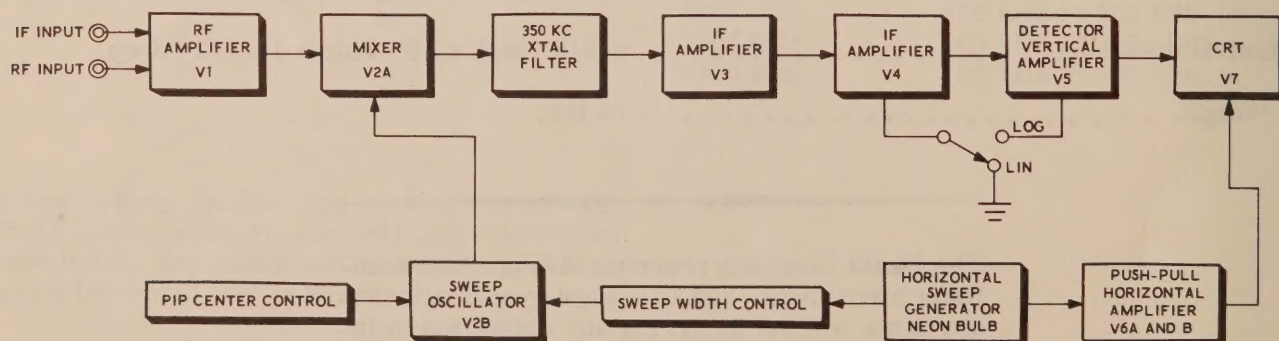

BLOCK DIAGRAM



is connected as a Hartley oscillator, except that the voltage-variable capacitance of diode D1 is used to sweep modulate the tuned circuit of coil L3 and capacitor C4. The capacitance of D1, and therefore the oscillator frequency, is altered at a regular rate by a portion of the horizontal sawtooth sweep voltage, which is coupled to it through a section of the horizontal Sweep Width switch, resistor R3, Variable Sweep Width control R4, and resistor R9. Bias is supplied to diode D1 through the Pip Center control.

The plate voltage of V2B is regulated to provide oscillator stability by neon lamp NE-83-A. This lamp is also used for the "ON" indicator of the unit.

The sweep width is determined by the amplitude of the sawtooth voltage that is applied to diode D1, which is controlled by the setting of the variable Sweep Width control and Sweep Width switch.

## MIXER

The amplified receiver IF signal at the plate of RF amplifier V1 is coupled through the required coupling circuit and through capacitor C23 to the grid of V2A. The plate circuit of V2A is tuned to 350 kHz by a crystal filter consisting of transformer T1 and crystals Y1 and Y2. The 350 kHz IF signal therefore, at any given instant, will originate in the mixer as the difference frequency between the instantaneous sweep oscillator frequency and any input RF signal that is exactly 350 kHz away. As the sweep oscillator frequency changes, different input signals will be coupled through the Scanalyzer to the cathode ray tube, where they will be presented as vertical pips.

## CRYSTAL FILTER AND IF AMPLIFIERS

Bifilar transformer T1 and crystals Y1 and Y2 form a half-lattice filter that provides extremely good resolution for an instrument of this type. The frequency spacing of Y1 and Y2 result in an IF bandwidth of approximately 210 Hz at the 6 dB points. The first IF stage, V3, is a conventional IF amplifier except for the cathode circuit. A fixed value of resistance in the cathode circuit is selected by a section of the Sweep Width switch to control the gain of this stage when selecting different sweep widths. A negative bias voltage is applied to the grid of this stage when the Amplitude Scale switch is placed in the -20 dB Log position.

The second IF stage, V4, is similar to the first IF stage, except at the Log setting of the Amplitude Scale switch a DC feedback voltage from the detector is applied to the grid of V4 to reduce its gain for strong signals. The chassis mounted Log-Adjust control determines the magnitude of the feedback voltage and the operating point of the IF stage which controls the logarithmic characteristic.

## DETECTOR

The amplified 350 kHz signals from V4 are passed through IF transformer T3 to the diode plate of detector V5. The output of the detector is direct-coupled to the grid of V5 through a low-pass RC filter consisting of capacitor C38, resistor R53, and combinations of capacitors C39, C41, and C42, which are selected by a section of the Sweep Width switch. This switch section provides a different degree of hum filtering for each switch position.



## HORIZONTAL SAWTOOTH GENERATOR AND AMPLIFIER

Neon lamp NE-83-B, resistors R56 and R57, the Variable Sweep Rate control, and capacitor C43 function as a relaxation-type sawtooth oscillator. At the beginning of each cycle, capacitor C43 begins to charge up to the supply voltage. Since the supply voltage is nearly ten times the firing voltage of the neon lamp, the voltage rise is quite linear.

When its firing voltage (about 70 volts) is reached, the lamp fires and the stored energy in the capacitor is quickly discharged through the lamp. When the extinguishing voltage is reached, the lamp goes out, capacitor C43 begins to charge again, and a new cycle begins.


This sawtooth voltage waveform is coupled through the Horizontal Width control (rear apron) to the grid of horizontal push-pull amplifier stage V6A. The Horizontal Width control determines the amount of sawtooth voltage to be amplified. The sawtooth voltage waveform is coupled to V6B through a common cathode connection, which produces the proper phase relationship for push-pull amplification.

The amplified sweep voltage at the plates of V6A and V6B is coupled directly to the horizontal deflection plates of the CRT, V7. Capacitor C46 couples the sweep voltage back to sweep oscillator circuit V2B.

## POWER SUPPLY

All B+ voltages are provided by a full-wave voltage doubler circuit. This circuit uses four silicon diodes, D4 through D7. Resistors R81, R82, and R83, capacitors C51 and C52, and four-section capacitor C53 make up the B+ filtering network. The -1500 volts DC required by the CRT is provided by selenium rectifiers D2 and D3, capacitors C47, C48, and C49, and resistor R79 in a full-wave voltage doubler circuit.

A 6.3 volt filament winding on power transformer T4 provides AC filament power for tubes V3, V4, and V6. A bridge rectifier, consisting of silicon diodes D8 through D11, provides DC filament voltage for tubes V1, V2, and V5 to keep the hum level on the signal down to a minimum. This is particularly important when using the slow sweep rate and narrow band width for narrow band analysis. The bias voltage that is applied to diode D1 in the sweep oscillator circuit and to the grid of IF amplifier stage V3 for the -20 dB Log position, is also derived from this circuit.

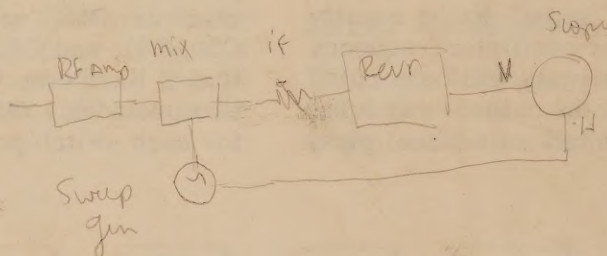

$$\begin{array}{r} 10.700 \\ 45 \\ \hline 10.345 \end{array}$$